

Software



FanTestic
Integrity
(complying with ISO14520)

Copyright © 2017 Retrotec

All rights reserved.

This document contains materials protected under International and Federal Copyright Laws. No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system without express written permission from Retrotec.

Retrotec makes no warranties with respect to this documentation and disclaims any implied warranties of merchantability, quality, or fitness for any particular purpose. The information in this document is subject to change without notice. Retrotec reserves the right to make revisions to this publication without obligation to notify any person or entity of any such changes.

FanTestic Integrity is a Trademark of Retrotec. Other trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective owners.

FanTestic Integrity **Retrotec's latest *Enclosure Integrity Test* software**

- ✓ Calculation of agent hold time or extended discharge rate, and peak pressure with required vent area, based on measured or estimated enclosure leakage
- ✓ Venting calculator to determine size of required pressure relief vent even before leakage is measured
- ✓ Comprehensive, informative, customizable reports output to Microsoft Word
- ✓ Automatic updates over the Internet
- ✓ Calculations fully compliant with the ISO 14520 standard (2015 edition), and some previous editions
- ✓ Small and versatile data storage of results using an open XML format (fxml)

Table of Contents

1	Installation instructions	5
1.1	Minimum system requirements	5
1.2	Download FanTestic Integrity	5
1.3	Start FanTestic Integrity	8
1.4	Enter a license key	8
1.5	Select a testing standard to use	10
1.6	Change language for user interface (and generated reports)	11
1.7	Choose formula used to calculate peak pressure	12
1.8	Change parameters used for running the program – (advanced operation)	13
2	Calculators and reference data are in the Tools menu.....	15
2.1	View design concentration values for agents	15
2.2	Calculate Pressure Relief Vent needed for system design.....	16
3	Perform an enclosure integrity test.....	18
3.1	Set up Door Fan equipment	18
3.2	Begin a new test in the software to record Door Fan test.....	18
3.3	Input background test information.....	18
3.4	Test and technician information	19

3.5	Equipment.....	19
3.6	Enter building and enclosure details.....	21
3.7	Enter Extinguishing Agent Information.....	26
3.7.1	Additional Info for Agents with Pressure Regulating Valves on discharge	29
3.7.2	Details for Aerosol Agents	29
3.8	Enter enclosure integrity test air leakage data – for Enclosure Hold Time Analysis	30
3.8.1	Enter recorded data from a Door Fan test	31
3.8.2	Leakage area calculated from door fan test entries	34
3.8.3	Enter leakage results already calculated from a previous Door Fan test	35
3.8.4	Leakage area used directly as entered	35
3.9	Enter optional Lower Leaks Test for Enclosure Hold Time Analysis	36
3.10	Enter values from an optional Upper Leaks Test	37
3.11	Calculate and see hold time analysis results	37
3.11.1	Click the calculate button to see results	37
3.11.2	Graph the test data and results	37
3.12	Total Enclosure Leakage and Lower leaks test results.....	38
3.13	Hold time analysis results Summary	39
4	Analyse Venting and Peak Pressure	40
4.1	Choose equations to calculate peak pressure and minimum leakage area required.....	41
4.2	Enter air leakage data used to determine leakage area of PRV	42
4.3	Choose leakage area to use for pressure relief	44
4.4	Venting and Peak Pressure Analysis test results.....	45
4.5	Graphic showing acceptable range of leakage for enclosure	46
5	Use the Test results.....	47
5.1	Save results to a test file (.fxml).....	47
5.2	Save results to a different file	47
5.3	Open a test file (.fxml)	48
5.4	Generate report documents (MS Word) from test data	48
5.5	Printing.....	48
6	Troubleshooting.....	49
6.1	Use the most current version of FanTestic Integrity	49
6.2	Install your Windows Updates	51
6.3	If using the “ADMIN” version, software will not update to latest.....	51
6.4	Changing Range configurations	51
6.4.1	Why change the Range configuration.....	52
6.4.2	Enter Test Fan data for each Range configuration used	52
6.5	Cannot generate reports in FanTestic Integrity	52
7	Ask for Support	53
7.1	Before you ask, update your software.....	53
7.2	What information to send	53
7.2.1	Find the Log File to Upload	53
7.2.2	Find the Test File to Upload	54
7.2.3	Find the Settings File to Upload	54
7.2.4	Create a picture of the error to Upload	54
7.3	Where to send the information	55
8	Get a License.....	56

1 Installation instructions


While FanTestic Integrity software may identify clean agent peak pressure and hold time risks, use of this software does not in any way guarantee the elimination of those risks.

1.1 Minimum system requirements


- Microsoft Windows O/S: XP (SP2 or greater) or newer (Vista/7/8) –current with all updates
- Processor: 1 GHz
- RAM: 512 MB
- Disk space: 600MB (32-bit) or 1.5 GB (64-bit)
- Microsoft Word: 2007/2010+ (or Word 2003 with 2007 support add-in)
- Internet connection with Microsoft Internet Explorer (for automatic software updates)
- .NET 4.0 framework (will update automatically with the FanTestic Integrity installation)

1.2 Download FanTestic Integrity


- Go to: <http://www.retrotec.com/support/software-downloads>

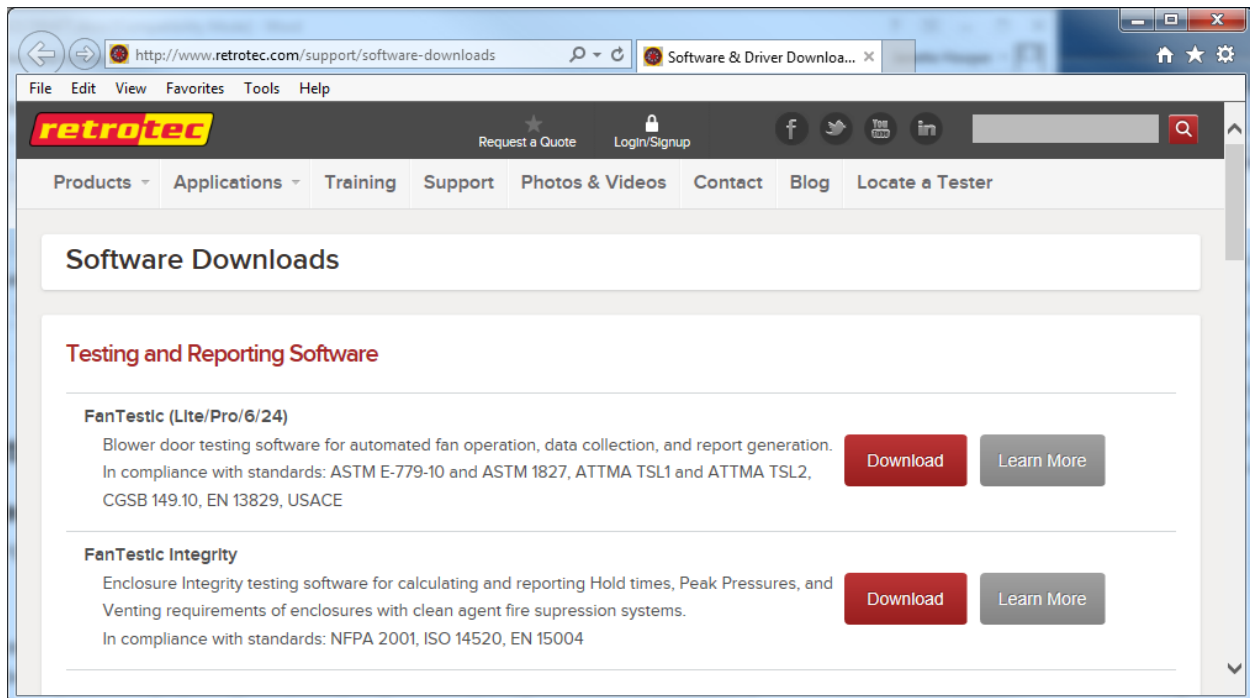


- Click the “Download” button next to FanTestic Integrity

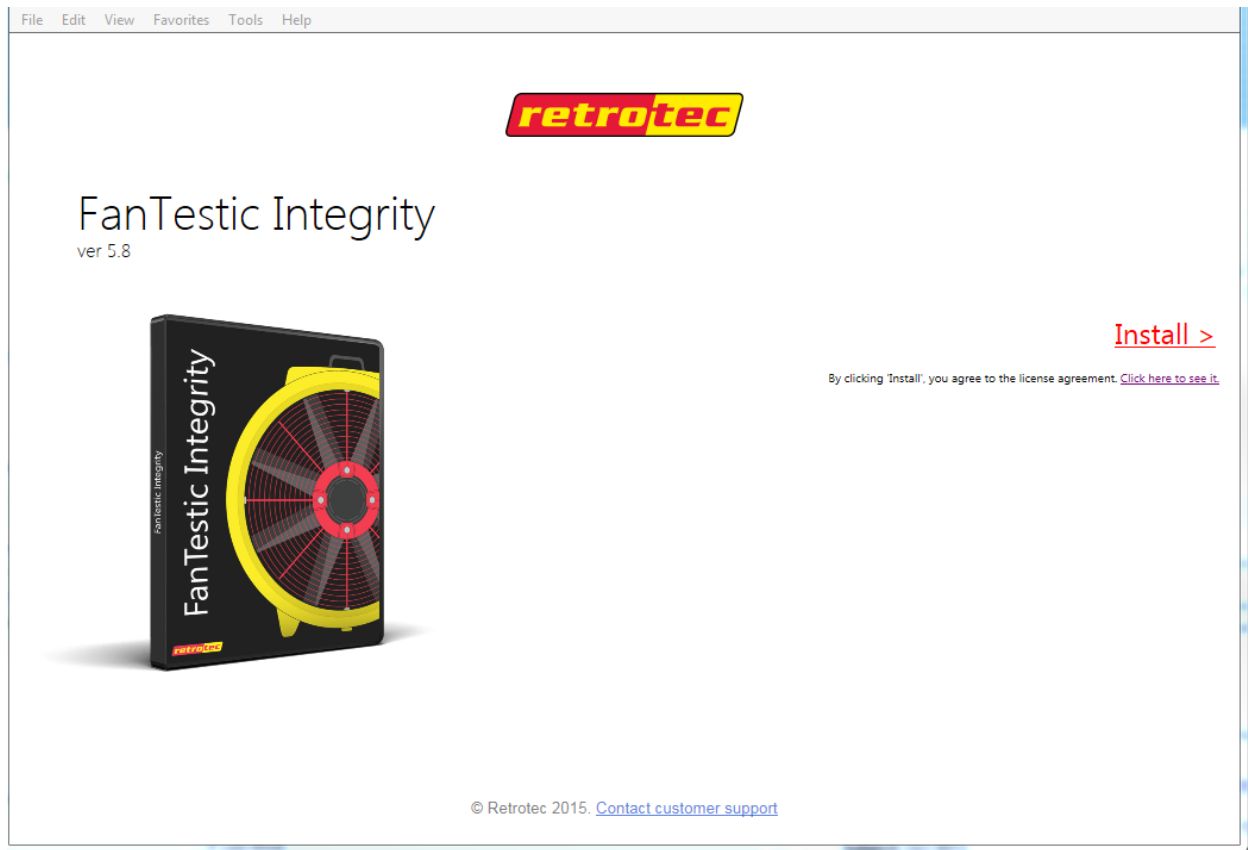


- Click the “Install” button on the window that opens.
- When prompted with “Do you want to run or save setup.exe?” click on the “Run” button.

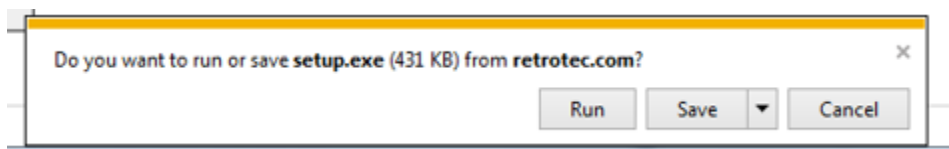


- If not prompted, go to the Downloads menu option on your web browser and double-click on the file you have just downloaded (which is called “setup.exe”).
- The “Application Install – Security Warning” window will open:

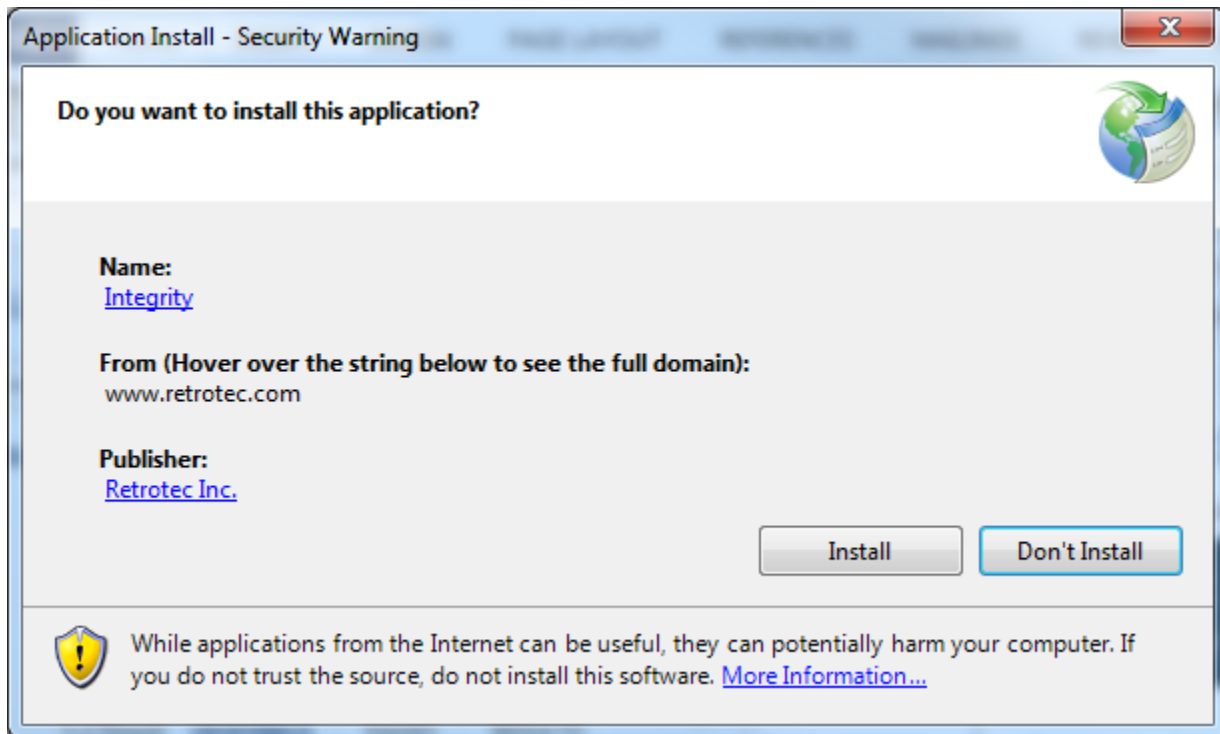

- click on the "Install" button.

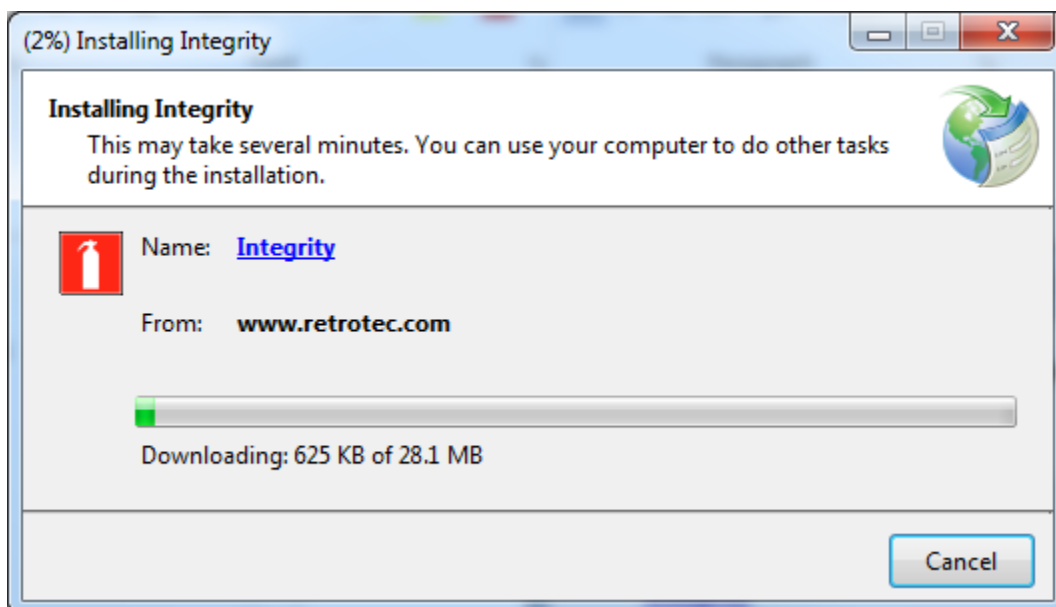

- If the User Account Control (UAC) asks for permission, you must give administrator permission for the software to install the USB driver.
- After installation, FanTestic Integrity will open on your desktop.

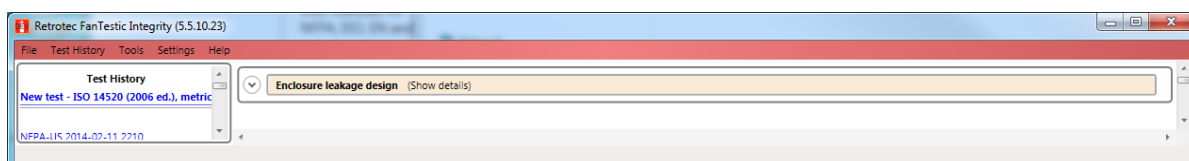

The first time you run FanTestic Integrity, you need to make some choices about how you will use FanTestic Integrity – access from the “Settings” menu as described in the next sections.

1.3 Start FanTestic Integrity

There are two ways to start the program:

- Click on Windows “Start Menu” → “All Programs” → “Retrotec” → “FanTestic Integrity”,
- or click the FanTestic Integrity icon




on your desktop.

FanTestic Integrity (FTI) will run in demo mode with full functionality for 60 days after you first install. Once the demo version expires, you will not be able to generate the MS Word reports or export your test data to MS Excel. You will still be able to enter test data and see the results on-screen.


Obtain a license and instructions for activating the software with the license before your demo expires by contacting sales@retrotec.com. The license will be valid for the period of time specified for the license, and once the license expires, you will not be able to generate the MS Word reports or export your test data to MS Excel. You will still be able to enter test data and see the results on-screen.

If your demo or license has expired you will see a dialog window similar to the following when you start FanTestic Integrity:

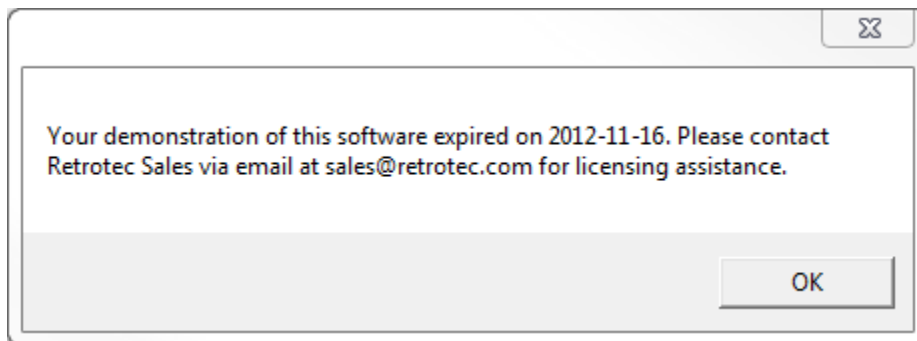

1.4 Enter a license key


- Open FanTestic Integrity, if not already open.
- Once in the program click “Settings”

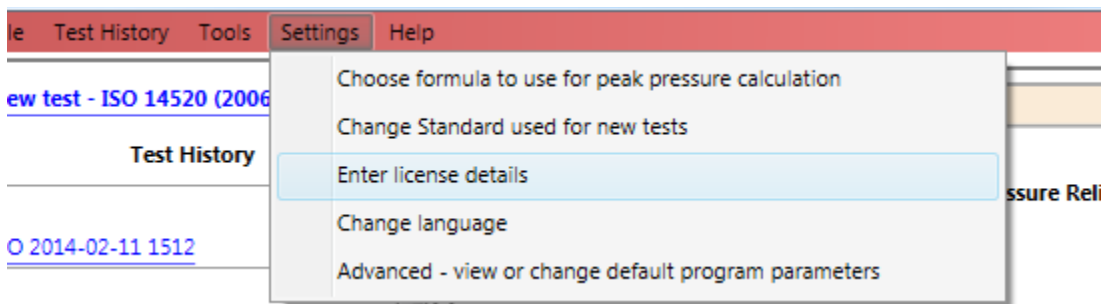

- Then click “Enter license details”.



- Click on the “Install License Key” button

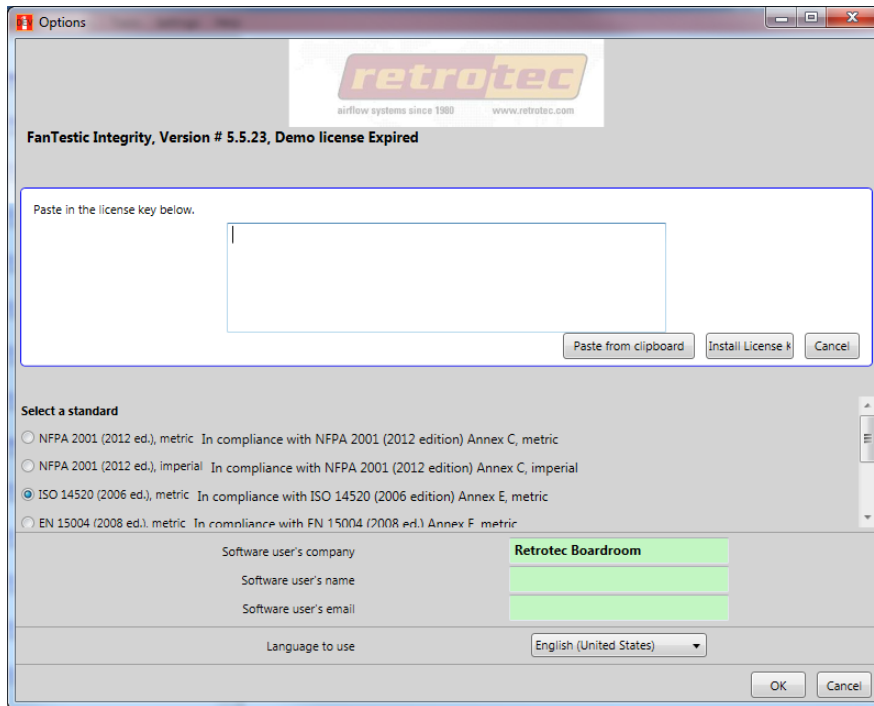

- then copy and paste the license key from the email you received into the text box that appears, being sure to include the “===START_KEY===” and “===END_KEY===” portion of the key. If selecting from an email, be sure that the email has not inserted any odd items into the string, such as an “mailto” link. The email containing the key that is sent out from Retrotec will be a “Text only” email, not HTML based, in order to try to minimize license corruption.
- Click on the “Install License” button below the text box.

Options

retrotec
airflow systems since 1980 www.retrotec.com

FanTestic Integrity, Version # 5.5.26, Demo license Expired

Paste in the license key below.

===START_KEY===xxxxxxxxxxxxxxxxxxxxxxxxxx==END_KEY===

Paste from clipboard Install License k Cancel

Select a standard

☐ NFPA 2001 (2012 ed.), metric In compliance with NFPA 2001 (2012 edition) Annex C, metric

☐ NFPA 2001 (2012 ed.), imperial In compliance with NFPA 2001 (2012 edition) Annex C, imperial

☒ ISO 14520 (2006 ed.), metric In compliance with ISO 14520 (2006 edition) Annex E, metric

☐ EN 15004 (2008 ed.), metric In compliance with EN 15004 (2008 ed.) Annex F, metric

Software user's company **Retrotec Boardroom**

Software user's name

Software user's email


Language to use English (United States)

OK Cancel

- Next, select a standard, and then fill in the user name and email address and then click “OK”. “Software user’s company” will be filled in automatically from the license that was entered.

1.5 Select a testing standard to use

- Open FanTestic Integrity, if not already open.
- Click on Settings:

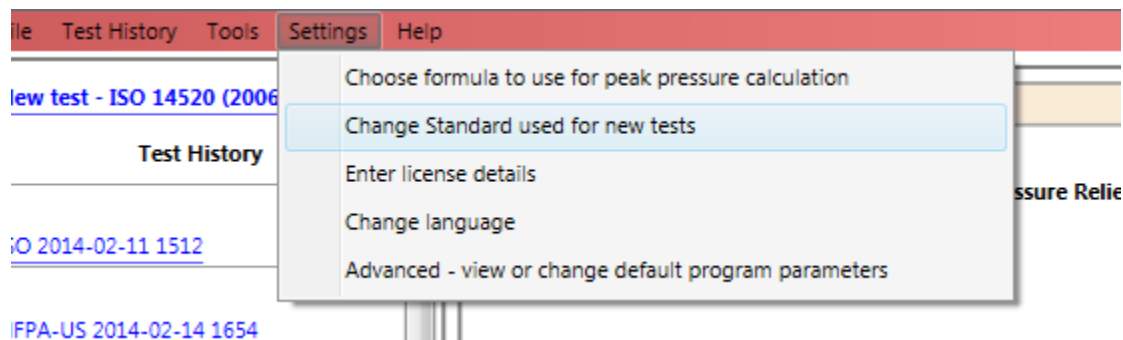

- then click on “Change Standard used for new tests” to open the options window.

Select a standard


- ☐ NFPA 2001 (2015 ed.), metric In compliance with NFPA 2001 (2015 edition) Annex C, metric
- ☐ NFPA 2001 (2015 ed.), imperial In compliance with NFPA 2001 (2015 edition) Annex C, imperial
- ☒ ISO 14520 (2006 edition) In compliance with ISO 14520 (2006 edition) Annex E, metric
- ☐ BS EN 15004 (2008 edition) In compliance with British Standard EN 15004 (2008 ed.) Annex E, metric
- ☐ APSAD R13 (2010) In compliance with APSAD R13 (2010), France
- ☐ AS - ISO 14520 (2009) In compliance with AS - ISO 14520 (2009), Australia

Select an older edition of a standard

- ☐ NFPA 2001 (2012 ed.), metric In compliance with NFPA 2001 (2012 edition) Annex C, metric
- ☐ NFPA 2001 (2012 ed.), imperial In compliance with NFPA 2001 (2012 edition) Annex C, imperial
- ☐ ISO 14520 (2000 edition) In compliance with ISO 14520 (2000 edition) Annex E, metric
- ☐ NFPA 2001 (2004 ed.), imperial In compliance with NFPA 2001 (2004 edition) Annex C, imperial
- ☐ NFPA 2001 (2004 ed.), metric In compliance with NFPA 2001 (2004 edition) Annex C, metric

- Next, select a standard from the list, and then click “OK”. Normally you will choose the latest edition of the standard, but access to any available older versions is available in the lower part of the list.
- Changes can be made any time, but a new test file must be created for the new settings to be used. If a test file is already open when changes are made, you will be warned before the software creates the new file.
- If you do not let the software create a new file at that point, the old file will remain open with the old settings until you click “File” → “New”, or use the “New test” link on the Test History menu, to create a new test using the new standard you chose.

1.6 Change language for user interface (and generated reports)

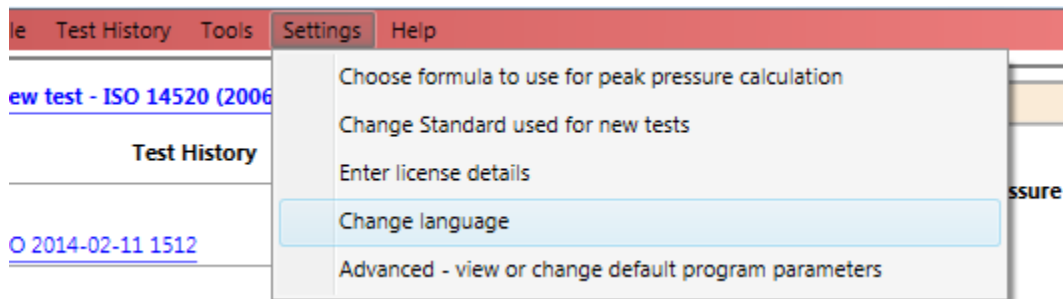

retrotec
airflow systems since 1980 www.retrotec.com

FanTestic Integrity, Version # 5.5.26, Demo license Expired

Install License Key

Select a standard

- ☐ NFPA 2001 (2012 ed.), metric In compliance with NFPA 2001 (2012 edition) Annex C, metric
- ☐ NFPA 2001 (2012 ed.), imperial In compliance with NFPA 2001 (2012 edition) Annex C, imperial
- ☒ ISO 14520 (2006 ed.), metric In compliance with ISO 14520 (2006 edition) Annex E, metric
- ☐ EN 15004 (2008 ed.), metric In compliance with EN 15004 (2008 ed.) Annex E, metric

Select an older edition of a standard

- ☐ ISO 14520 (2000 ed.), metric In compliance with ISO 14520 (2000 edition) Annex E, metric
- ☐ NFPA 2001 (2004 ed.), imperial In compliance with NFPA 2001 (2004 edition) Annex C, imperial
- ☐ NFPA 2001 (2004 ed.), metric In compliance with NFPA 2001 (2004 edition) Annex C, metric

Software user's company: Retrotec


Software user's name:



Software user's email:

Language to use: English (United States)


dansk (Danmark)
Deutsch (Deutschland)
English (United States)
English (United Kingdom)
Español (España, alfabetización internacional)
français (France)
italiano (Italia)
latviešu (Latvija)
lietuvių (Lietuva)
Nederlands (Nederland)
norsk, bokmål (Norge)
polski (Polska)
português (Portugal)
русский (Россия)
svenska (Sverige)

1.7 Choose formula used to calculate peak pressure

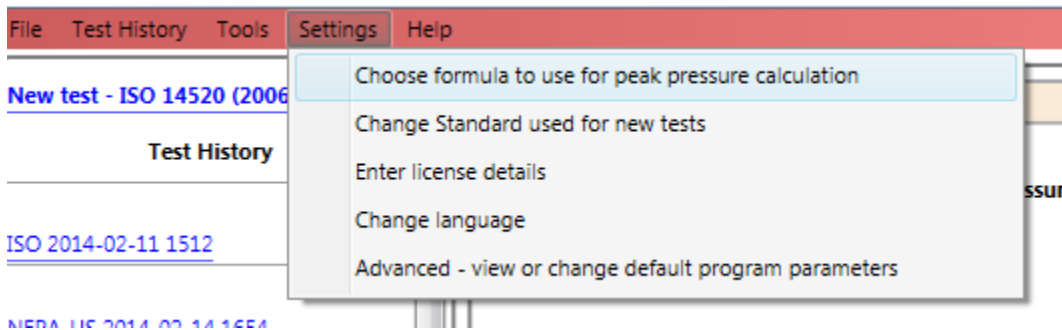

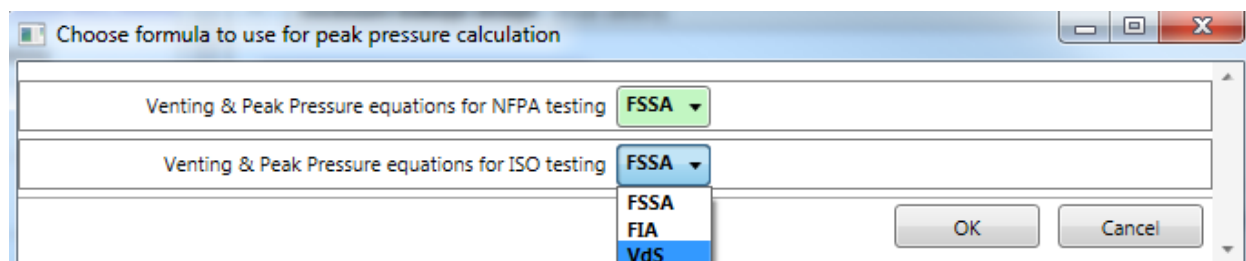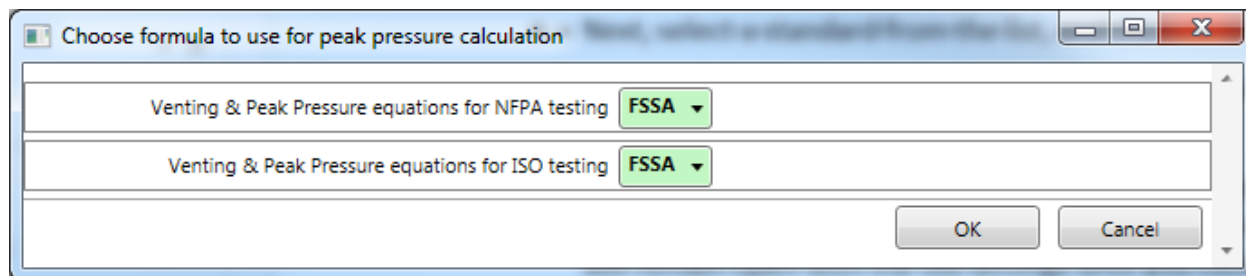


If you choose FIA or VdS, a warning dialog will open, but the choice will be respected after you click OK on the warning and OK on the original dialog.

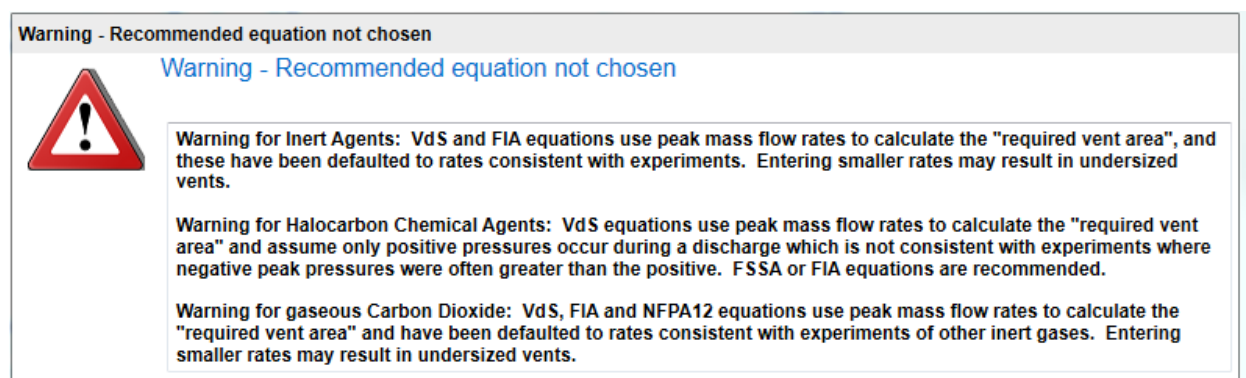


If you choose to use equations relying on peak mass flow rate to calculate peak pressure and minimum leakage required to relieve the peak pressure, entering smaller peak flow rates to override default values may result in under-estimating minimum venting area required. Such an under-estimation would lead to over-pressurization if a smaller than necessary vent is installed.

1.8 Change parameters used for running the program – (advanced operation)

- Open FanTestic Integrity if it is not already open.
- Click on “Settings” → “Advanced - view or change program parameters”

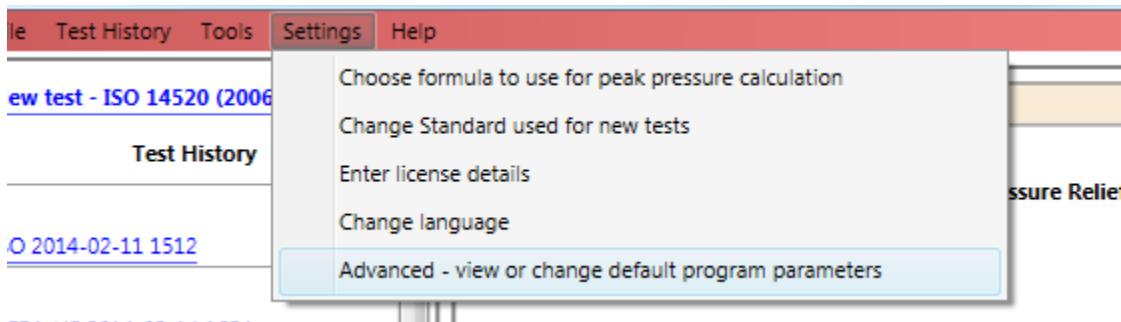


The dialog window opens with the “Basics” tab showing.

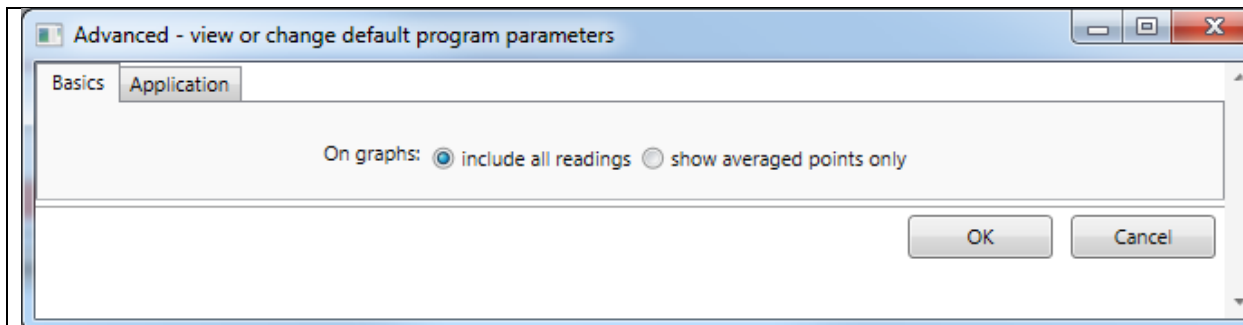

“Basics” Tab

Choose how automatic readings will be displayed on graphs – only applies to experimental use of automatic control (not yet implemented).

Click on the “Application” tab to see the following selections:

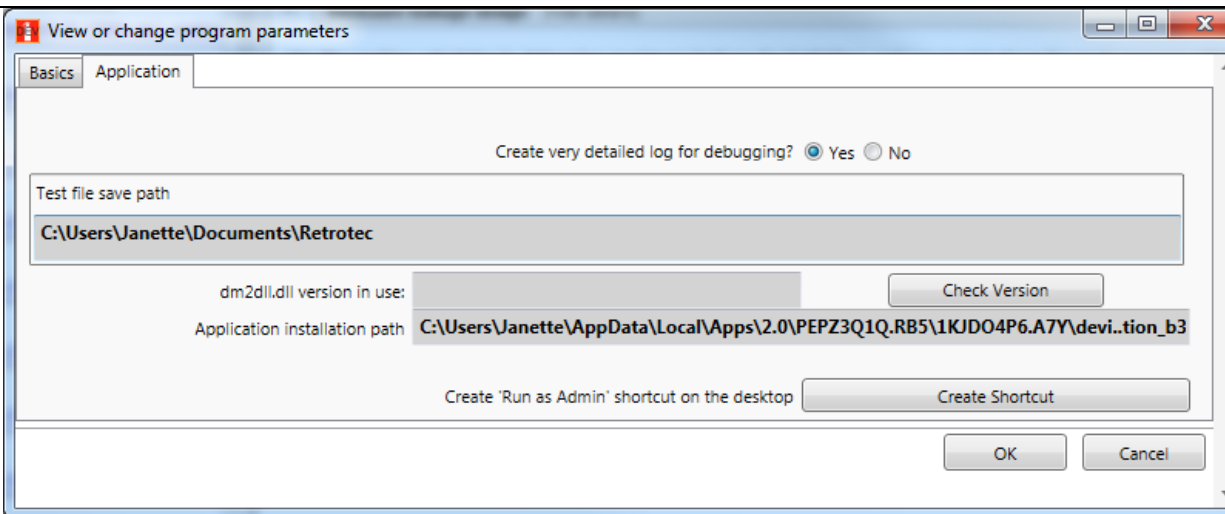

“Application” Tab


For your information, displays the location of the FanTestic Integrity application on your computer, and where test results will be stored. You can turn detailed logging on or off. A new log will be created each day. Creating detailed logs is recommended, so you can send to bugs@retrotec.com if you have a software problem.

Create “Run as Administrator” shortcut – only needed for experimental debugging purposes, for use with automatic control of the DM-2 gauges.

Click "OK" to exit the window and for changes to become effective, or Cancel if you were just viewing the current settings and do not wish to make any changes.

2 Calculators and reference data are in the Tools menu

2.1 View design concentration values for agents

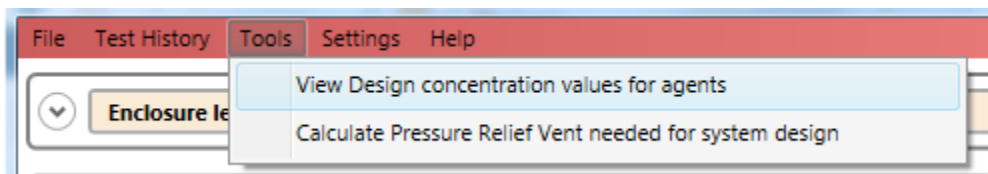

If you have ISO14520, 2006 edition or AS-ISO 14520 (2009 edition) or APSAD selected as the standard, the following window will open:

ISO-14520 (2006) Design Concentration Table

Agent	Class B [%]	Surface Class A Higher Class A [%]	Hazard Class A [%]
HFC-227ea	9.0	7.9	8.5
HFC-125	12.1	11.2	11.5
IG-541	41.2	39.9	39.1
IG-55	47.5	40.3	45.1
IG-55PI	46.4	N/A	44.1
IG-100	43.7	40.3	41.5
IG-01	51.0	41.9	48.4
NOVEC	5.9	5.3	5.6

Minimum Design Concentrations provided may be useful guidelines but are not a substitute for a specification which must be provided by a qualified Fire Protection Engineer after they have completed an evaluation of the hazard and the suppression system design.


If you have BS EN15004, 2008 edition selected as the standard, the following window will open:

EN15004 (2008) Design Concentration Table			
Agent	Class B [%]	Surface Class A [%]	Higher Hazard Class A [%]
HFC-227ea	9.0	7.9	8.5
HFC-125	12.1	11.2	11.5
IG-541	48.1	39.9	45.7
IG-55	47.6	40.3	45.2
IG-55PI	46.4	N/A	44.1
IG-100	47.6	40.3	45.2
IG-01	51.7	41.9	49.2
NOVEC	5.9	5.3	5.6

Minimum Design Concentrations provided may be useful guidelines but are not a substitute for a specification which must be provided by a qualified Fire Protection Engineer after they have completed an evaluation of the hazard and the suppression system design.

2.2 Calculate Pressure Relief Vent needed for system design

To open the Venting Calculator, click on the Tools menu and choose the “Calculate Pressure Relief Vent needed for system design” menu option:

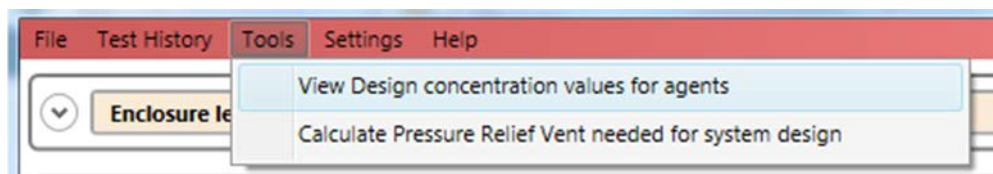


Alternatively you can click on the “start venting calculator” button in the “Enclosure leakage design” expander interface:

File Test History Tools Settings Help


Enclosure leakage design (hide details)

start venting calculator Calculate Pressure Relief Vent needed for system design ?


Warning for Inert Agents: VdS and FIA equations use peak mass flow rates to calculate the "required vent area", and these have been defaulted to rates consistent with experiments. Entering smaller rates may result in undersized vents.

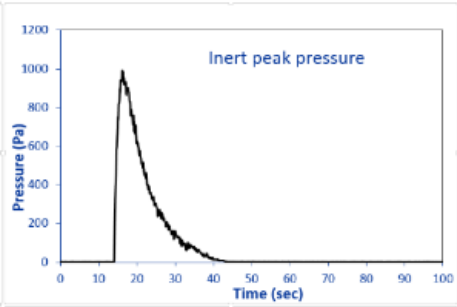

Warning for Halocarbon Chemical Agents: VdS equations use peak mass flow rates to calculate the "required vent area" and assume only positive pressures occur during a discharge which is not consistent with experiments where negative peak pressures were often greater than the positive. FSSA or FIA equations are recommended.

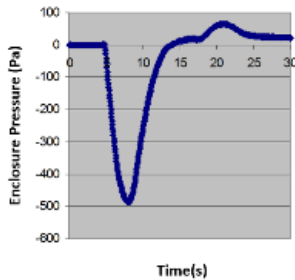

Warning for gaseous Carbon Dioxide: VdS, FIA and NFPA12 equations use peak mass flow rates to calculate the "required vent area" and have been defaulted to rates consistent with experiments of other inert gases. Entering smaller rates may result in undersized vents.

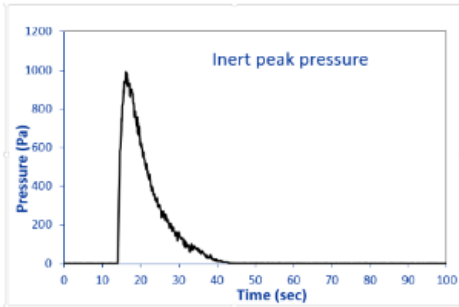

The venting calculator will open:

File

retrotec

Venting Calculator

units ☒ metric ☐ mixed ☐ imperial

venting equation FSSA (recommended)

enclosure leakage Standard NFPA 2001 (2012)

discharge type Descending Interface

Extinguishing Agent Info: Agent Argon EC 013

enclosure

Maximum flooded volume, V	1,000 m ³
Maximum flooded height, H ₀	3 m
Lower leakage fraction, F	0.5

performance criteria

You may wish to change to ISO14520 for the enclosure leakage standard:

3 Perform an enclosure integrity test


3.1 Set up Door Fan equipment

- The Door Fan system must be set up properly into the doorway of the enclosure to perform an Enclosure Integrity Test. For instruction on how to set up a Door Fan system, refer to the [QuickGuide-Blower Door](http://www.retrotec.com/manuals-guides/QuickGuide-Blower%20Door-QG301.pdf), which will be downloaded from the Retrotec website: (<http://www.retrotec.com/manuals-guides/QuickGuide-Blower%20Door-QG301.pdf>)
- You can also refer to the [Operation Manual-Air Leakage Test Systems](http://www.retrotec.com/manuals-guides/Manual-Door%20Fan%20Operation.pdf): (<http://www.retrotec.com/manuals-guides/Manual-Door%20Fan%20Operation.pdf>)
- Prior to the test, achieve the minimum and maximum induced pressures in the enclosure desired for your test, to ensure that your fan is on a suitable Range configuration. It is possible that you will have to change Range configuration during a test. For more information on changing Range configuration, see section 6.1.

3.2 Begin a new test in the software to record Door Fan test


To start a new test click on “New test” at the top of the test history, or use “File” → “New”.

Make sure “New Test” at the top of the test history is followed by “ISO 14520”. If not, in the menu, click “Tools” → “Settings” → “Change Standard” and choose the radio button for the edition of the ISO 14520 standard to use in calculating results for the test.

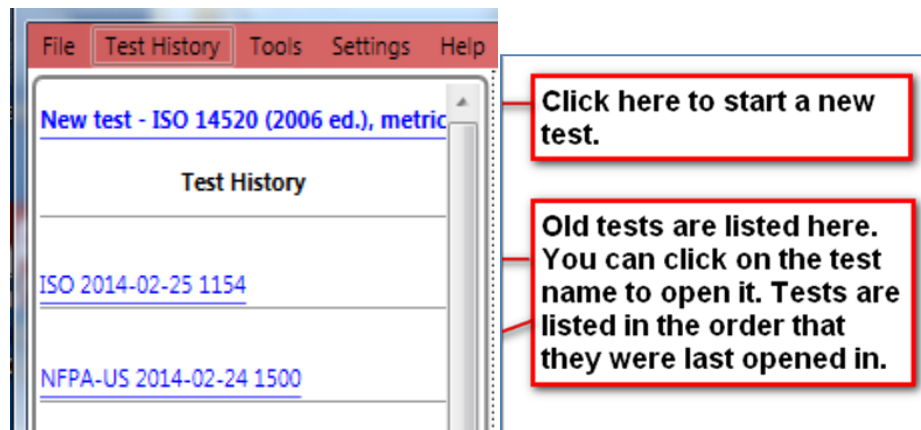

3.3 Input background test information

 
Enter your data into all the yellow boxes – the yellow boxes indicate required entry items without default values. They will turn green after entry.

Click the  button once all the data is entered in order to view the results; gray boxes show the calculated results and are not editable.


The user input is split up into several different sections which are detailed in the following sections.

3.4 Test and technician information

The second expanding tab in the user interface provides places to enter details about who performed the test, and shows details of the file being used to save the test information, the standard being complied with (ISO in this case), and details of the software license:

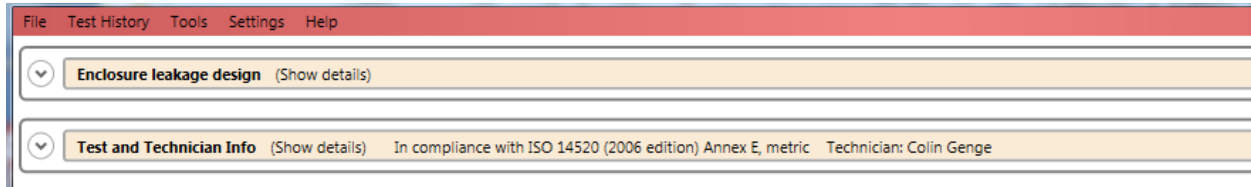

If you open the expander titled “Test and Technician Info” by clicking on the down arrow to the left, you will see:

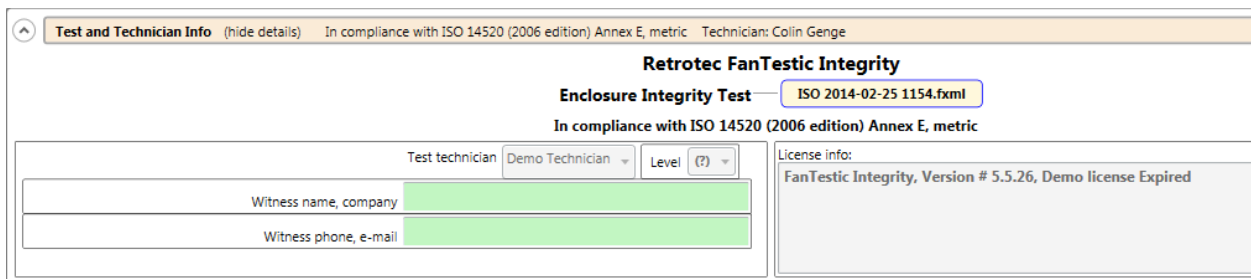


The following data entry options are available on the left side:

Test technician	Joe Tester	Level	3
Witness name, company	Colin Genge, Retrotec Energy Innovations		
Witness phone, e-mail	604-732-0142, stephen@retrotec.com		

- Information entered for the test technician will be saved for new tests, and is only editable if the software license is not expired.
- “Witness name, company”
Enter the name of the witnessing authority and the company
- “Witness phone, e-mail”
Enter the contact number and email for the witnessing authority

3.5 Equipment

The third expanding tab in the user interface provides places to enter details about the equipment used to perform the test:

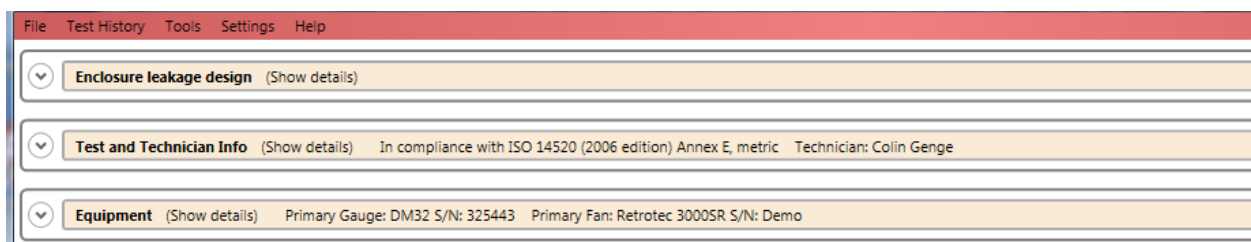

If you open the expander titled “Equipment” by clicking on the down arrow to the left, you will see:

Equipment (Show details) Primary Gauge: DM32 S/N: 402345 Primary Fan: Retrotec 5000 S/N: Demo

+ Add a Test Fan #1 Gauge **DM32** S/N **402345** Fan **Retrotec 5000** S/N **Demo** Location **upstairs entry**


Gauges last calibrated: Fan last calibrated: **2015-08-05**

The number of gauge/fan pairs in the list is determined by the software license. An expired license will allow only one.

Information entered for the fan model, gauge model, and serial number will be saved for new tests.


“Fan”

- Select the type of fan that you are using from the picture menu that will appear.

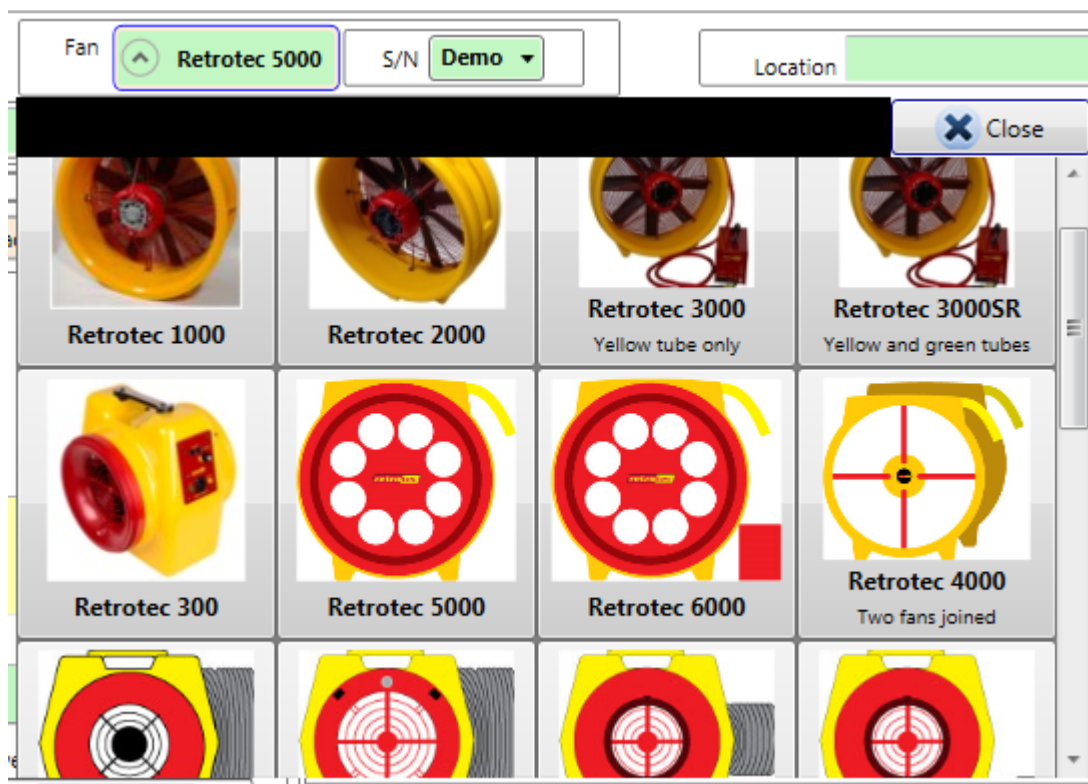

 - To close the “Fan” selection box, click the picture matching the fan you are adding. The fan picture background color will be added highlighted when you are hovering over it with the cursor.



- If you are allowed to use more than one fan with your software license, you will have an “Add a Test Fan” button on the left side. Click the  button once for each of the

fan/gauge pairs you would like to add. You can use the  button to delete a fan/gauge pair, or you can use the  button to make that fan/gauge pair the primary (placing it as “#1” Fan).

“Gauge”

Select the gauge type (DM32, DM32-20A, DM-2, DG-700) from the drop down list. You must select the gauge model for FanTestic Integrity to compute results.

“S/N” to enter the serial number of each of the fan and the gauge

- The first S/N input is to the right side of the “Gauge” input and is to record the serial number of the gauge.
- The serial number of a Retrotec DM-2 gauge can be found on a gray label at the base (on the bottom end) of the gauge, as well as in the gauge splash screen in the top left corner immediately after turning it on
- The serial number for a Retrotec DM32 gauge can be found on a black and white label on the back of the gauge, and on the top of the splash screen when the gauge powers on. In the DM32 Settings menu, the serial number can be found in the “Firmware” option.
- The second S/N input is to the right side of the “Fan” input and is to record the serial number of the fan. If you see “Demo” as the serial number in this drop-down, then you are running a demo license, or you have chosen a fan model which you do not own. You need to choose the model of fan that you own for your fan serial number to show up in the drop down. FanTestic Integrity licenses are specific to particular fans.
- The serial number of Retrotec Door Fans can be found on a gray label on the Fan Top of the device.

“Location”

- Enter the physical location of the fan.

“Fans last calibrated” and “Gauges last calibrated”

- Enter the calibration dates of the fan and gauge

3.6 Enter building and enclosure details

The fourth expanding tab in the user interface provides places to enter details about the enclosure being tested, the agent and amount of agent being used, calculation method for hold time, and conditions during hold time:

File Test History Tools Settings Help

Enclosure leakage design (Show details)

Test and Technician Info (Show details) In compliance with ISO 14520 (2006 edition) Annex E, metric Technician: Colin Genge

Equipment (Show details) Primary Gauge: DM32 S/N: 325443 Primary Fan: Retrotec 2000 S/N: Demo

Building and Extinguishant details (Show details) Building: the building enclosure: the enclosure Agent FM200 (ISO) 7.5 % Discharge type: Continuous Mixing

If you open the expander titled “Building and Extinguishant details” by clicking on the down arrow to the left, for all variants of ISO14520 except the Australian you will see:

Building and Extinguishant details (hide details) Building: a building name enclosure: an enclosure name Agent FM200 (ISO) 595 kg Discharge type: Descending Interface

Building Info:

Building description Enclosure Description

a building name an enclosure name

Building Address

address,
a city, a county, a post code

Customer details

a customer

Elevation above sea level	30 m
Maximum flooded volume, V	1,000 m ³
Maximum flooded height, H ₀	7 m
Required protected height, H _p	4 m
Equivalent sharp interface height, H _s	4 m

☐ Over-ride default value of 90% of flooded height

☐ Over-ride (H_e) calculation

Enclosure conditions prior to discharge

Design temperature 20 °C

Bias pressure during hold time, P_{bh} 0 Pa

Extinguishing Agent Info:

Calculate hold time result using: Descending Interface

Agent FM200 (ISO) [HFC-227ea]

Agent quantity by mass 595 kg

Initial concentration, c_i 7.569 %

Design concentration, c 7.5 %

Minimum concentration, c_{min} 6.375 %

Specified hold time 10 min

Australian ISO14520 users will see:

Building and Extinguishant details (hide details) Agent Argonite 550 kg Discharge type: Descending Interface

Building Info:

Building description Enclosure Description

Building Address

Customer details

Elevation above sea level	10 m
Maximum flooded volume, V	1,000 m ³
Maximum flooded height, H ₀	7 m
Required protected height, H _p	3 m
Equivalent sharp interface height, H _s	3 m

☐ Over-ride default value of 90% of flooded height

☐ Over-ride (H_e) calculation

Enclosure conditions prior to discharge

Design temperature 20 °C

Bias pressure during hold time, P_{bh} 0 Pa

Extinguishing Agent Info:

Calculate hold time result using: Descending Interface

Agent Argonite [IG-55]

Agent quantity by mass 550 kg

Initial concentration, c_i 32.291 %

Design concentration, c 30 %

Minimum concentration, c_{min} 25.5 %

Specified hold time 10 min

☐ Over-ride minimum concentration

On the left, enter details about the building and enclosure within the building:

Building Info:											
Building description	Enclosure Description										
a building name	an enclosure name										
Building Address											
address, a city, a county, a post code											
Customer details											
a customer											
	<table border="1"> <tr> <td>Elevation above sea level</td> <td>30 m</td> </tr> <tr> <td>Maximum flooded volume, V</td> <td>1,000 m³</td> </tr> <tr> <td>Maximum flooded height, H₀</td> <td>7 m</td> </tr> <tr> <td>Required protected height, H_p</td> <td>4 m</td> </tr> <tr> <td>Equivalent sharp interface height, H_e</td> <td>4 m</td> </tr> </table>	Elevation above sea level	30 m	Maximum flooded volume, V	1,000 m ³	Maximum flooded height, H ₀	7 m	Required protected height, H _p	4 m	Equivalent sharp interface height, H _e	4 m
Elevation above sea level	30 m										
Maximum flooded volume, V	1,000 m ³										
Maximum flooded height, H ₀	7 m										
Required protected height, H _p	4 m										
Equivalent sharp interface height, H _e	4 m										
☐ Over-ride default value of 90% of flooded height ☐ Over-ride (H _e) calculation											

- “Building description”
Enter a brief description of the building you are testing.
- “Enclosure Description”
Enter a brief description of the enclosure in the building you are testing.
- “Building Address”
Enter the address of the building you are testing.
- “Customer details”
Enter the name and contact information of the person/company that you are doing the test for.
- “Elevation above sea level”
Enter the building’s elevation above sea level. This value is used to perform a small correction to the agent concentration.
- “Maximum flooded volume”
Calculate and enter the enclosure volume as it is defined in ISO 14520 (net protected volume).
- “Maximum flooded height”
Enter the maximum flooded height as it is defined in ISO 14520
- “Over-ride default value of 90% of flooded height”
Checking the box permits entry of any “Required protected height” which would typically be “the elevation of the protected hazard”. By doing so would mean you were not fully compliant with the letter of the Standard but there are reasons why this might make sense; read on.

The 2006 version of this Standard requires agent concentration to be held at 10%, 50% and 90% of the total flooded height for Descending Interface Hold Time calculations. Check with your local jurisdiction to determine what is required because many do not require this conservative approach. Both the 2000 version of ISO and the version about to be released in 2015 require: “At the end of the hold time, the extinguishant concentration at the elevation of the protected hazard shall be not less than 85% of the design concentration”.

In practice, using 90% of the total flooded height for Descending Interface Hold Time calculations will reduce hold times by 50 to 75%. This forces enclosures to be 2 to 4 times tighter to pass which is often difficult, expensive and/or impossible. For this reason, many jurisdictions do not adhere to this requirement but some do.

Continual Mixing is often a way to comply with the Standard because mixing maintains the same concentration at all heights making the 90% requirement irrelevant. This is often the only way the enclosure will pass the required hold time because mixing will always yield longer hold times. If the Initial Concentration is greater than the Design the hold time will increase even more. For example, if the Initial is 40%, the Design is 40% and the Minimum is 34% and the hold time is 7.1 minutes, then, if the Initial is increased to 44%, the Design is still 40%, the Minimum is still 34% but the hold time increases to 11 minutes. When increasing the Initial, the Design stays the same but the hold time increases. Do NOT make the common mistake of making the Minimum 85% of the Initial which would nullify the effect of adding extra agent. Instead, always make the Minimum 85% of Design.

In order to comply using continual mixing, there must be mechanical or thermodynamic effects during the hold time that would ensure Continual Mixing does occur. Fortunately, these conditions are often present when dedicated HVAC is left running during the hold time or where hot equipment will cause mixing due to convection or where an extended agent discharge is used.

Our guidance is to follow the requirements of the AHJ or to continue with past procedures. This software will make calculations in any way you choose but the operator may want to consider the following comments to provide a context should a decision path be needed.

1. If a definitive procedure is in place, continue with it until the new version of ISO is in place that will eliminate the 90% requirement.
 2. The vast majority of tests done worldwide and future versions of all standards will not require protection to a mandatory 90%, so over-riding this default is a reasonable action.
- “Required protected height”
If “Over-ride default value of 90% of flooded height” checkbox is checked, enter the minimum protected height. This height is usually measured to the top of the equipment you are trying to protect. If not, FanTestic Integrity will calculate 90% of the flooded height and enter this automatically for you.
 - “Over-ride (He) calculation”
Checking the box over-rides the H_e calculation and instead predicts the time it would take for the agent mixture to fall to the Minimum protected height, H_p . Using H_p assumes the interface has no thickness and will make your test non-compliant but there may be reasons you want to do this which are explained under, “Our guidance”.

The ISO 2006 Edition of this Standard requires an equivalent interface height, H_e , be calculated in order to reduce hold times to allow for the development of a Wide Interface that was theorized to occur. H_e is only used in Descending Interface calculations where no Continual mixing occurs.

The effect of allowing the software to perform the H_e calculation will reduce the hold time by 20% for inerts and about 35% for halocarbon chemical agents. This is done to make allowance for the formation of a theoretical Wide Interface that would reduce concentrations in the center of the interface below the Minimum. Since the Wide Interface was demonstrated not to occur and changes to the Standard have been accepted, there are precedents for over-riding the calculation:

1. H_e was not used in the 2000 version
2. NFPA does not use H_e
3. The new version of ISO will have a different H_e calculation that will give longer hold times but not as long as not using H_e at all.
4. Many countries do not use the H_e calculation.
5. Previous versions of Retrotec software (CA2001) did not force an H_e calculation but it was supplied as a separate calculation for those who wanted to use it.

Our guidance is to follow the requirements of the AHJ or to continue with past procedures. This software will make calculations in any way you choose but the operator may want to consider the following comments to provide a context should a decision path be needed.

1. If a definitive procedure is in place, continue with it until the new version of ISO is in place that will reduce the impact of H_e calculations.
2. If the H_e calculation has not been done in previous tests, you may wish to consider the over-ride to make the evaluation on the same basis.

Note that if H_e is being used now, the new Standard that may be published in 2015, will give longer hold times. If H_e is not used now, the new Standard will result in shorter hold times.

- “Equivalent sharp interface height”
A calculated value for the height of interest, used in the calculations of hold time in certain cases. If “Over-ride (H_e) calculation” checkbox is checked, the value in this box will be the same as the value in the “Required protected height box”. If not, then FanTestic Integrity will calculate the H_e and enter this calculated value in the box.

On the top right, enter details about the enclosure conditions prior to discharge

Enclosure conditions prior to discharge	
Design temperature	70 °F
Bias pressure during hold time, P_{bh}	0 Pa

- “Design temperature”
Enter the minimum anticipated temperature that the enclosure could experience during a discharge. This temperature is used to calculate the lowest (worst case) Initial Concentration that could be achieved after a discharge.

- “Bias pressure during hold time”
Enter the bias pressure during hold time conditions, as it is defined in ISO 14520 (measured or estimated bias pressure during hold time). If the bias pressure at discharge is greater than 25% of the Initial column Pressure, it must be reduced. Even though this IS a requirement, many installations have massive bias pressures and will still hold concentration but require “engineering judgment” that Retrotec can assist with if needed.

3.7 Enter Extinguishing Agent Information

On the bottom right of the “Building and Agent details” expander tab, enter details about the extinguishing agent and hold time calculation method:

Extinguishing Agent Info:	
Calculate hold time result using:	Descending Interface ▼
☐ Using a pressure regulating valve	Agent ARG055 [IG-55] ▼
Agent quantity by	mass ▼ 570 kg
	Volume, 403.6 m ³
	Initial concentration, c_i 45.282 %
?	Design concentration, c 30 %
	Minimum concentration, c_{min} 25.5 %
	Specified hold time 10 min

- “Calculate Hold time result using:”
Select which type of fire suppression system model will be assumed for calculation of the hold time.

There are three options, defined according to how the agent behaves after a discharge in the enclosure:

“Descending Interface “– Agent is discharged at near-ceiling level into the enclosure. An ‘interface’ with a constant concentration (known as the Initial Concentration) descends from the discharge level as gas leaves the enclosure through leaks. The time it takes for this ‘interface’ to reach the Minimum protected height is defined as the “hold time”.

“Continuous Mixing” – Agent is discharged at near-ceiling level into the enclosure. Fans circulate gas throughout the room, resulting in a uniform agent concentration. This concentration begins at Initial Concentration and reduces until it eventually reaches the specified Minimum Concentration. The time it takes for the Initial Concentration to reach the Minimum Concentration is defined as the “hold time”.

“Extended Discharge “ – An initial agent discharge achieves the Design Concentration over a short period of time, which is followed by a second Extended discharge rate (actual) from another supply of agent in order to maintain at least the Design concentration for a desired

duration. By measuring the enclosure leakage, the agent loss rate can be calculated, which is calculated as the Extended discharge rate (required). The Enclosure Integrity Test passes if the Extended discharge rate (actual) is greater than the Extended discharge rate (required).

- “Agent”
Select which agent is used for the enclosure’s fire suppression system.
- “Agent quantity by”
Enter the agent quantity and choose whether you are entering agent mass or just entering the agent’s initial concentration directly. The agent mass can be found on a label on the bottles containing the agent; if you have both the agent mass from the bottle and an initial concentration specification, it is advised to use the agent mass. Users of INERGEN or other IG-541 can enter Agent quantity by volume since they may know the quantity as volume.
- “mass” – calculated and displayed if agent quantity is not entered as mass
Mass of agent being discharged.
- “Initial concentration” [% volume] - calculated, not entered
The initial concentration, as a percent of volume, of agent in the enclosure immediately after a complete discharge (i.e. the concentration of agent at the beginning of the Hold time), calculated based on the agent mass, and enclosure details. Initial concentration is expressed as a percentage. **A value will be calculated once you have entered both a quantity and the “Maximum flooded volume”.**
- “Design concentration”
The agent design concentration, which will be specified by the fire protection engineer designing the system.
For reference, the question mark help icon next to this item brings up a table containing values for design concentration listed in your standard, same as the Tools menu item described in section 2.1.
- “Minimum concentration”
The minimum concentration is the final concentration in the enclosure at the end of the hold time. It is set by default to 85% of the “Design concentration”.
- For Australian ISO14520 users, the user can choose to over-ride the default value for Minimum concentration:

?	☒ Over-ride minimum concentration	Design concentration, c	30 %
		Minimum concentration, c_{min}	25.5 %

Checking the box allows you to enter any “Minimum concentration” and select a value that is less than 85% of design. By doing so would mean you were not fully compliant with the letter of the Standard.

Standards require that, at the end of the hold time, the agent concentration must be greater than 85% of the Design at the Minimum protected height. To place this in perspective, most countries do adhere to this requirement but some do not, notably Australia.

The Initial concentration must be equal to or greater than the Design. In cases Initial concentration is greater than the Design, the Minimum must still be based on Design, not the Initial.

Entering a Minimum concentration smaller than 85% of Design will increase retention time if:

1. There is Continuous Mixing, or
2. Descending interface is chosen and He is used. If He is not used then there will be no change.

In the case of “Continuous mixing”, the same items are displayed:

Extinguishing Agent Info:	
Calculate hold time result using: Continuous Mixing ▼	
☐ Using a pressure regulating valve	Agent ARGO55 [IG-55] ▼
Agent quantity by mass ▼	10 kg
Volume,	7.1 m ³
Initial concentration, c_i	6.837 %
? Design concentration, c	6 %
Minimum concentration, c_{min}	5.1 %
Specified hold time	10 min

In the case of “Extended Discharge”, another value will be displayed:

Extinguishing Agent Info:	
Calculate hold time result using: Extended Discharge ▼	
☐ Using a pressure regulating valve	Agent ARGO55 [IG-55] ▼
Agent quantity by mass ▼	10 kg
Volume,	7.1 m ³
Initial concentration, c_i	6.837 %
? Design concentration, c	6 %
Minimum concentration, c_{min}	5.1 %
Planned extended discharge rate	0.00 kg/min
Specified hold time	10 min

- The “Planned extended discharge rate” value will also be displayed
The entered value represents the planned extended discharge rate for the existing system. The value can be found from the fire suppression system’s specification sheet. For an Extended Discharge situation to pass, the “Planned extended discharge rate” must be greater than the calculated “Required extended discharge rate” in the results section. The required rate is calculated based on how much leakage is entered for the enclosure.
- “Specified hold time”

The required Hold time for a passing test, also known as the “hold time”. For compliance with ISO 14520 a value of at least 10 minutes must be entered, unless a variance is approved by the Authority Having Jurisdiction (AHJ).

3.7.1 Additional Info for Agents with Pressure Regulating Valves on discharge

When you have an agent with a pressure regulating valve on the discharge system, click on the “using a pressure regulating valve” check box. This will remove any agent that was previously selected and you may get a calculation warning which you can ignore until you enter an agent. The list of agents available changes to those for which there is data to calculate hold time.

Calculate hold time result using: **Continuous Mixing**

☒ Using a pressure regulating valve Agent (select an agent)

Agent quantity by **mass**

Initial concentration, C_i

Design concentration, C

(select an agent)

- Argon [IG-01]-with pressure regulating valve
- Ceodeux B0480 [IG-100]-with pressure regulating valve
- IG-55-with pressure regulating valve
- ProInert [IG-55PI]-with pressure regulating valve
- IG-541-with pressure regulating valve

3.7.2 Details for Aerosol Agents

When you select Aerosol as an agent, the type of discharge may revert to “select a type” because the type can only be “Continuous Mixing”.

Extinguishing Agent Info:

Calculate hold time result using: (select a type)

Agent **Aerosol**

Agent quantity by **mass** **45.0** kg

Initial Application Density **0.6** kg/m³

Minimum Density kg/m³

Specified hold time **10** min

Choose “Continuous Mixing” as the method to use for calculating hold time. Enter the mass of agent as usual, and then FanTestic Integrity will calculate the “Initial Application Density” based on the volume of the enclosure you have entered. You then enter the “Minimum Density” allowed to extinguish the fire and the specified hold time.

Extinguishing Agent Info:

Calculate hold time result using: **Continuous Mixing**

Agent **Aerosol**

Agent quantity by **mass** **45** kg

FanTestic Integrity cannot calculate peak pressure for Aerosol agents, so the “Peak Pressure Analysis” expander tab will be disabled when you choose “Aerosol” as the agent.

3.8 Enter enclosure integrity test air leakage data – for Enclosure Hold Time Analysis

The fifth expanding tab in the user interface provides places to enter details about the Enclosure Leakage by door fan test performed according to ISO 14520 Annex E, and the pass/fail result from comparing the calculated hold time based on the tested leakage area with the specified hold time:

If you open the expander titled “Hold time analysis: Total Enclosure Leakage” by clicking on the down arrow to the left, you will see:

- There are two methods to determine the total enclosure leakage – either enter recorded pressure/flow values from a door fan test performed on the enclosure and have FanTestic Integrity calculate the leakage (“Enter Door fan test values”), or enter a known value for the enclosure leakage (“Enter leakage results from a previous door fan test”).

a: 29 sq in Hold time: 8.4 minutes Lower leakage fraction: 0.5

Total Enclosure Leakage

☒ Enter Door Fan test values ☐ Enter leakage results from a previous Door Fan test

•

If “Enter Door fan test values” is selected, you are choosing to use the “Induced Pressures” and “Flows” from a door fan test to calculate Equivalent Leakage Area and the results. This method of entry is selected by default.

Alternatively, if “Enter leakage results from a previous door fan test” is selected, you are choosing to enter an “Equivalent Leakage Area” value directly, for instance if you just want to get an idea of what the results would be if this number were true. This is used if you want to experiment with different leakage sizes just to see how the results vary. If this value is entered, you do not have to enter “Induced Pressures” and “Flows” for FanTestic Integrity software to calculate results.

3.8.1 Enter recorded data from a Door Fan test

Choose, or leave the default choice as, “Enter Door Fan test values” as the selection under “Total Enclosure Leakage”:

a: 29 sq in Hold time: 8.4 minutes Lower leakage fraction: 0.5

Total Enclosure Leakage


☒ Enter Door Fan test values ☐ Enter leakage results from a previous Door Fan test

And the data entry section will then look like:


Test date	2014-02-18	Start time	12:27	Get Time	Operator location	Inside
Temperature, initial	indoors	20.0	C	outdoors	20.0	C
				Atmospheric pressure, P_t	101.325	kPa
				Bias pressure during fan test, P_{bx}	8.0	Pa

Pressurization set				Depressurization set			
Induced pressure [Pa]				Induced pressure [Pa]			
10				-10			
+	×	Test Fan	1	+	×	Test Fan	1
			A				A
Corrected flow rate [m ³ /h]				Corrected flow rate [m ³ /h]			
2,721				3,114			
Detailed Results...				Detailed Results...			
Calculate				Show Graphs			

 - “Test date”
The date the test was started is automatically filled in with the current date in YYYY-MM-DD format
- “Start time”

24 hour time is automatically entered by the computer when you start a new test. If this time does not match the time you start your test, you can click  to update the time that will be recorded in your generated test report.

- “Operator location”

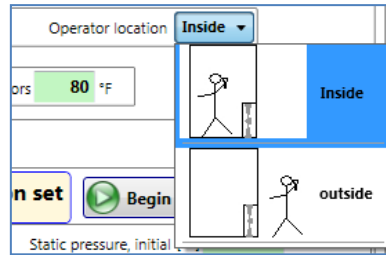

Select whether the operator is located inside or outside the enclosure during the test (inside is typical). Operator location is used in conjunction with the sign (positive or negative) from the “Induced pressure” readings, to determine the test direction (Pressurization or Depressurization).


- “Bias pressure during fan test”

The pressure before a pressurization or depressurization test begins, while the fan is sealed and turned off. Bias pressure values correct the induced pressure readings from pressures other than what is induced by the airflow of the Door Fan.

When manually entering data into FanTestic Integrity, set the time averaging on the gauge to at least 60 seconds for baseline readings. This must be done in order to compensate for the effects of wind and to ensure that you get an average reading. On windy days you will have to take readings for a longer period of time. To determine if it is windy, set your gauge 25 second averaging and if the pressure fluctuation is above 2 Pa. If so, double the time averaging for the baseline to 120 seconds.

According to ISO 14520, bias pressures measured at the time of the Door Fan test must be within a range of ± 3 Pa.

If the value entered is outside these bounds, a warning will result similar to the following:

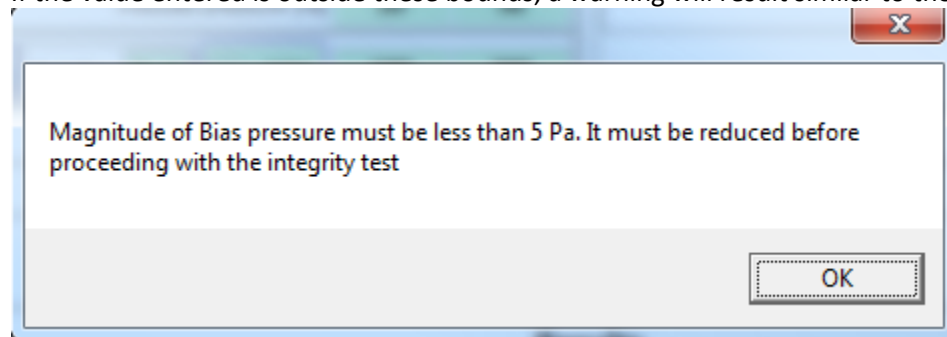

Note: If you’ve used the [Baseline] function on a Retrotec gauge, you should first copy this Baseline into FanTestic Integrity as the “Bias pressure during fan test”, then clear the Baseline from the gauge.

Otherwise, the induced pressure value will have the bias pressure subtracted twice – once on the gauge and another time in FanTestic Integrity software.

- “Temperature, initial”

These are the indoor and outdoor temperatures at the start of the test. They are used to correct for flow rates through the fan, since air densities are different at different temperatures. Airflow correction due to temperature change is required for compliance with ISO 14520.

- “Atmospheric pressure”

The pressure due to the weight of air in the Earth’s atmosphere, which changes with elevation. This value can be accurately found from the local weather network. The default value of the Atmospheric pressure in FanTestic Integrity is set at 101.3 kPa.

- “Induced pressure”

Pressurization set

Induced pressure [Pa]	10				
-----------------------	----	--	--	--	--

The pressure in the enclosure as a result of the airflow induced by the Door Fan. Induced pressures are read from the gauge as “PrA”. ISO 14520 requires testing at least 5 points between 10 and 60 Pa in both directions.

Note: If you are testing in the Depressurization direction, you must enter the negative sign, “-” in front of the pressure. When you have done so, you will see a Depressurization label:

Depressurization set

When manually entering data into FanTestic Integrity, set the time averaging on the gauge to at least 20 seconds for induced pressure and flow readings. This must be done in order to compensate for the effects of wind and to ensure that you get an average reading. On windy days you will have to take readings for a longer period of time. To determine if it is windy, set your gauge 25 second averaging and check if the pressure fluctuation is above 2 Pa. If so, double the time averaging for the induced pressure and flow readings to 40 seconds.

- “Test Fan”


Range Configuration, or
units of flow rate

Test fan number *Test fan data*

“Test Fan” data can be input as Fan Pressures, in units of Pa, (which allows FanTestic Integrity to calculate air flow rates through the Door Fan) or can be entered manually as air flow rates through the Door Fan, in units of CFM, m³/h, m³/s, or L/s.


Most commonly, you would enter “Test Fan” data from the “Flow” readings in the units of CFM from the gauge, or another unit of your choice. Whichever unit you choose, you must select the unit in the software. To select the unit, click the  button and scroll to the

bottom of the pop up window. There you will see the choices of Flow units, click the unit you will be using to enter Flow values:

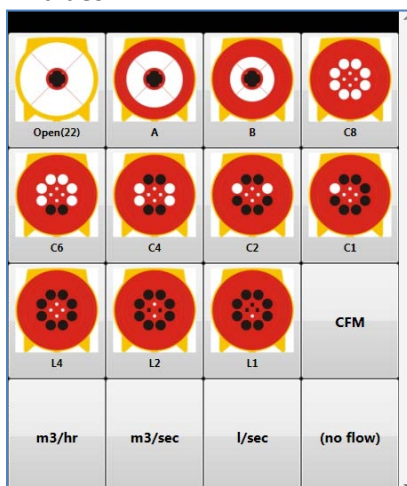

You can also enter the Fan Pressures by entering the “PrB” readings from the Retrotec gauge, along with the Fan Range configuration in use, so that FanTestic Integrity can calculate the Flow. When Fan Pressures are entered, you must select the Range

Configuration installed on the Door Fan. To select the Range configuration, click the  button and click the picture of the Range configuration in the popup display.

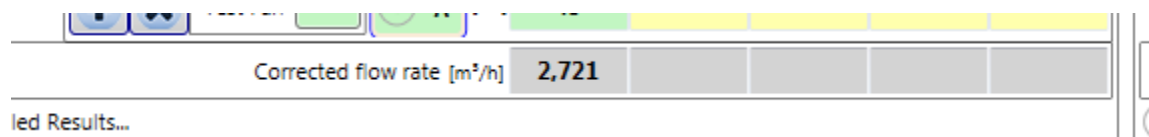

- “Corrected flow rate”
displays the entered or calculated air flow rates through the Door Fan required to achieve the indicated Induced Pressure.

3.8.2 Leakage area calculated from door fan test entries

Results are displayed individually for each of Pressurization and Depressurization data sets. If both “Pressurization” and “Depressurization” data sets are completed, the results will appear in a combined Results section, showing the average of the results from each data set.

Pressurization set	Depressurization set
Induced pressure [Pa] 10	Induced pressure [Pa] -10
Test Fan 1 A [Pa] 45	Test Fan 1 A [Pa] 46
Corrected flow rate [m³/h] 2,721	Corrected flow rate [m³/h] 3,114
Detailed Results...	Detailed Results...
Calculate Show Graphs	

The reason behind performing an air leakage test in both directions is to average out any potential pressure problems there might be in one direction over the other (like blowing open a damper in one direction, but sucking it closed in the other).

If there is bias pressure during the door fan test, it will be applied to both the pressurization and depressurization sets and the values may appear skewed if you do not realize that the bias is applied during the calculation of results:

Bias pressure during fan test, P_{bias} **8.0** Pa

Pressurization set		Depressurization set	
Induced pressure [Pa]	10	Induced pressure [Pa]	-10
Test Fan 1 A [Pa]	45	Test Fan 1 A [Pa]	46
Corrected flow rate [m ³ /h]	2,721	Corrected flow rate [m ³ /h]	3,114
Detailed Results...		Detailed Results...	

[Calculate](#) [Show Graphs](#)

If the entered bias pressure or any of the other values is changed, be sure to press “Calculate” to re-calculate the Results:

Corrected flow rate [m ³ /h]	2,721	Corrected flow rate [m ³ /h]	3,114
Detailed Results...		Detailed Results...	

[Calculate](#) [Show Graphs](#)

Results

Equivalent leakage area at 10 Pa [cm ²]	5,211	Predicted Hold time (descending interface) [min]	1.1
Maximum allowable leakage at 10 Pa that will maintain 10 min hold time [cm ²]	587.7	Results Summary	
Detailed Results...		FAIL - Measured ELA of 5,211 cm ² is greater than the maximum allowable ELA of 588 cm ² . At least 4,623 cm ² of leakage must be sealed.	

3.8.3 Enter leakage results already calculated from a previous Door Fan test

Choose “Enter leakage results from a previous Door Fan test” as the selection under “Total Enclosure Leakage”:

s) Leakage area: 29 sq in Hold time: 8.4 minutes Lower leakage fraction: 0.5

Total Enclosure Leakage

☐ Enter Door Fan test values ☒ Enter leakage results from a previous Door Fan test

And the data entry section will change to look like:

Enter leakage area **29** sq in at reference: ☒ 10 Pa Estimated flow exponent, n **0.682**

[Calculate](#) [Show Graphs](#)

Enter the leakage area and the n value that was calculated in the previous Door Fan test.

Set n as 0.5 if you do not know what the previous test n value was.

3.8.4 Leakage area used directly as entered

Press “Calculate” to take the directly entered leakage area value from the data entry area, and put it into the results section.

☐ Enter Door Fan test values
 ☒ Enter leakage results

Enter leakage area 29 sq in
 at reference: ☒ 10 Pa

Calculate

Results

Equivalent leakage area at 10 Pa [sq in]	29
Maximum allowable leakage at 10 Pa that will maintain 10 min hold time [sq in]	24.8

3.9 Enter optional Lower Leaks Test for Enclosure Hold Time Analysis

Lower leaks tests are either Flex Duct tests or Plastic on the Ceiling tests, which are only performed if the Total Enclosure Leakage test has failed.

If the entered “Total Enclosure Leakage” data results in a failure, this will be stated in the “Results Summary” of the Total Enclosure Leakage test. At that point, the user clicks on the “Add Lower leaks Test” button at the bottom of the “Hold time analysis: Total Enclosure Leakage” expander tab, and a new expander will be added for the user to enter the results from performing a lower leaks test.

> **Hold time analysis: Total Enclosure Leakage** (hide details)
 Leakage area: 5,211 cm²
Hold time: 1.1 minutes
 Lower leakage fraction: 0.5

Total Enclosure Leakage

☐ Enter Door Fan test values
 ☒ Enter leakage results from a previous Door Fan test

Enter leakage area 5,211 cm²
at reference: ☒ 10 Pa
 Estimated flow exponent, n 0.6

Calculate
Show Graphs

Results

<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: right;">Equivalent leakage area at 10 Pa [cm²]</td> <td style="text-align: center;">5,211</td> </tr> <tr> <td style="text-align: right;">Maximum allowable leakage at 10 Pa that will maintain 10 min hold time [cm²]</td> <td style="text-align: center;">587.7</td> </tr> </table> ☒ Detailed Results...	Equivalent leakage area at 10 Pa [cm ²]	5,211	Maximum allowable leakage at 10 Pa that will maintain 10 min hold time [cm ²]	587.7	Predicted Hold time (descending) Results Summary FAIL - Measured ELA of 5,211 cm² is greater than the maximum allowable ELA of 588 cm². At least 4,623 cm² of leakage must be neutralized. ☒ Detailed Results...
Equivalent leakage area at 10 Pa [cm ²]	5,211				
Maximum allowable leakage at 10 Pa that will maintain 10 min hold time [cm ²]	587.7				

Note: The enclosure was previously tested, tested leakage area was entered.

Add Lower Leaks Test

The test procedure for a lower leaks test is the same as a Total Enclosure Leakage test, with the addition of some form of neutralizing the leaks that are occurring from the upper part of the enclosure. The lower leaks test procedure is required to negate the leakage above the enclosure’s suspended ceiling by neutralizing the ceiling space (with a Flex Duct), or by physically covering the entire ceiling space (with sheets of plastic air barrier).

Lower leaks Test data is entered in the same manner as the Total Enclosure Leakage data.

FanTestic Integrity factors in results from both tests to provide new test results in the “Results Summary” of the Lower leaks test. The main result is calculation of a value for the leakage fraction F, which is otherwise defaulted to the most conservative value of 0.5.

For more information on Lower leaks tests, please consider attending the Retrotec Level 3 Enclosure Integrity Training.

 
3.10 Enter values from an optional Upper Leaks Test

“Upper Leaks” tests are similar to the Lower Leaks test, but you would instead temporarily seal the Lower Leaks and test leakage above. Upper Leaks Test Data is entered in the same manner as the Lower Leaks or the Total Enclosure Leakage tests.

FanTestic Integrity factors in a new lower leakage fraction, F, by using the leakage results from the Total Enclosure Leakage, Lower Leaks, and Upper Leaks test to provide new test results in the “Results Summary” of the Upper Leaks test.

For more information on Upper Leaks tests, please consider attending the Retrotec Level 3 Enclosure Integrity Training.

3.11 Calculate and see hold time analysis results


Results are displayed in gray boxes. Remember to click  if any data is changed, in order to calculate and display the updated results.


3.11.1 Click the calculate button to see results



Always click calculate before generating a report, or recording values any other way.

 3.11.2 Graph the test data and results

FanTestic Integrity provides a graphical display of Induced pressure and fan flow readings by clicking the  button. The graphs will come up in a separate window that can be opened or closed at any time.

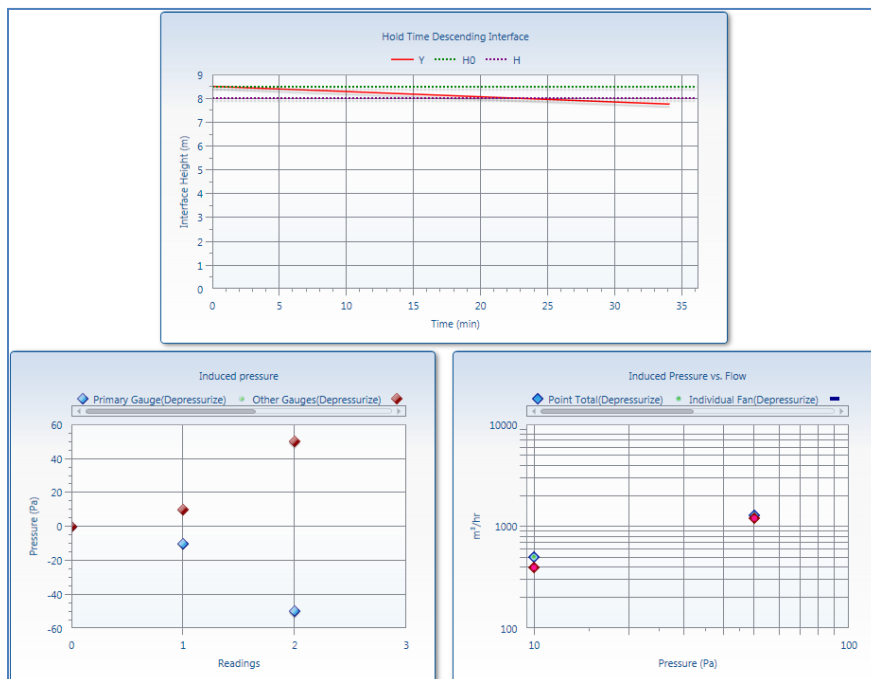

3.12 Total Enclosure Leakage and Lower leaks test results

		Results
Equivalent leakage area at 10 Pa [sq in]		22
Maximum allowable leakage at 10 Pa that will maintain 10 min hold time [sq in]		23.8
Detailed Results...		
Lower leakage fraction, F		0.50
Flow exponent, n		0.6000
Flow constant, k ₁ [CFM/Pa ⁿ]		18.70

- “Flow constant”, k_1 and “Flow exponent”, n

A Building Leakage Curve is created after at least two “Test Fan” data points have been entered, which is used to estimate the leakage rate of the building at any pressure. The Building Leakage Curve is defined by the following equation:

$$Q = k_1 \times P^n$$

where:

Q is the air “Flow” rate through the fan (CFM or m³/h)

k_1 is the “Flow constant, (CFM/Paⁿ or (m³/h)/Paⁿ)

P is the pressure difference between the inside and outside of the enclosure (Pa)

n is the “Leakage exponent”

Example: calculate the airflow needed to create a 5 Pa pressure if:

$$k_1 = 110.2 \quad n = 0.702$$

$$Q, \text{ the airflow (at 5 Pa)} = 110.2 \times 5^{0.702} = 341 \text{ CFM.}$$

It would take 341 CFM to cause a 5 Pa pressure change in this building.

- “Equivalent Leakage Area at 10 Pa” (EqLA) [cm² or sq in]
EqLA is defined as the area of a hole (in units of cm² or sq in) in a thin panel that would leak the same amount of air as the building does at a pressure of 10 Pa. It most closely approximates physical hole sizes found in buildings - for example, a 2 inch by 3 inch rectangular opening would measure about 6 square inches of EqLA.
- “Maximum allowable leakage at 10 Pa that will maintain xx min hold time”, [sq in or cm²]
The largest EqLA allowed by the specified hold time – any larger will require sealing and the enclosure will fail the test.
- “Lower leakage fraction”, *F*
The Lower leakage fraction is the ratio between the Lower Leakage Area (LLA) and Total Enclosure Leakage. Lower leakage fraction can be calculated by dividing the EqLA from the Lower leaks test by the EqLA from the Total Enclosure Leakage test. Otherwise, it is defaulted to the most conservative value, 0.5.

3.13 Hold time analysis results Summary

The Results Summary indicates to the user if the Enclosure Integrity Test has passed or failed in compliance with ISO 14520 (2006 edition).

Results	
	Calculated Hold time (descending interface) [min] 8.4
Results Summary	FAIL - Measured ELA of 29 sq in is greater than the maximum allowable ELA of 25 sq in. At least 5 sq in of leakage must be sealed.
⬆ Detailed Results...	
	Calculated Hold time (descending interface) [min] 8.4
	Calculated Hold time (continuous mixing) [min] 8.2
	Minimum required extended discharge rate [lb/min] 1.13

If your test has failed, you need to seal up enclosure leakages to lower the “Hold time” or required “Extended discharge rate”, depending on what “Test type” it is.

Results Summary:


PASS - The retention time of 34.1 minutes is greater than the required 10 minutes, therefore the enclosure PASSES the retention time requirements.

- “Calculated hold time (descending interface)” [min]
The Hold time for a Descending Interface “Test type”. For an Enclosure Integrity Test to pass according to ISO 14520, this time must be at least 10 minutes, or greater than the “Specified hold time” entered in the “Extinguishing Agent Info” section of FanTestic Integrity. This number can be increased by sealing up leakages in the enclosure. For a description on Descending Interface type systems, refer to section 3.4.


- “Calculated hold time (continuous mixing)” [min]
The Hold time for a Continuous Mixing “Test type”. For an Enclosure Integrity Test to pass according to ISO 14520, this time must be at least 10 minutes, or greater than the “Specified hold time” entered in the “Agent Info” section of FanTestic Integrity. This number can be increased by sealing up leakages in the enclosure. For a description on Continuous Mixing type systems, refer to section 3.4.
- “Extended discharge rate” [lb/min, kg/min]
The extended discharge rate that is required for the enclosure, which depends on how much leakage is in the enclosure. For an Enclosure Integrity Test to pass, this number must be greater than the existing Extended discharge rate, entered as the actual Extended discharge rate (in the “Agent Info” section of FanTestic Integrity), designed for the system. This number can be increased by sealing up leakages in the enclosure. For a description on Extended discharge type systems, refer to section 3.4.

4 Analyse Venting and Peak Pressure

The last expanding tab in the user interface provides places to enter details about the venting and peak pressure calculations based on the chosen formula (as described by FSSA, FIA or VdS, or NFPA12 for CO₂):

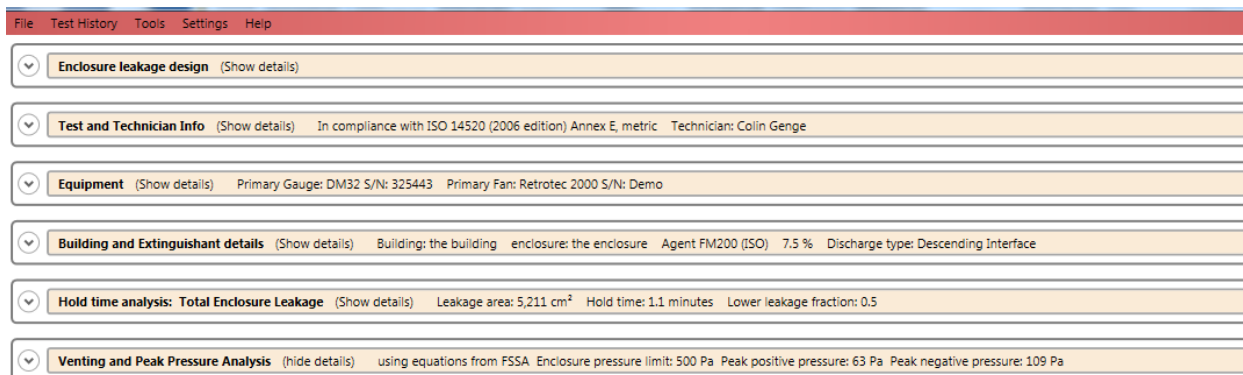

The expander will not be enabled and you will not be able to open it if the agent has been chosen as Aerosol. See the document “[Explaining Aerosol Calculations](#)” online for details, also accessible from within the program:

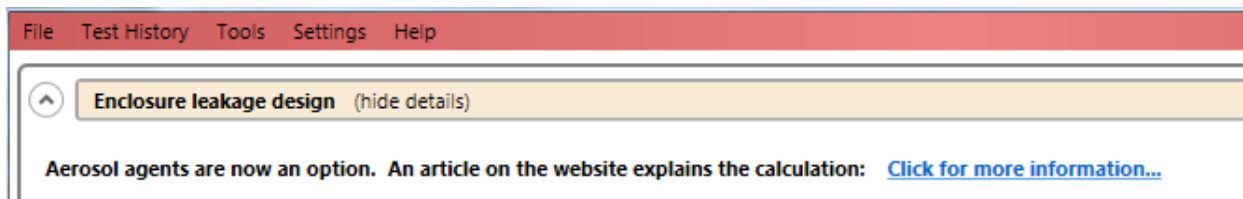

If you can open the expander titled “Venting and Peak Pressure Analysis” by clicking on the down arrow to the left, you will see:

Venting and Peak Pressure Analysis (hide details) using equations from FSSA (FM200 (NFPA) [HFC-227ea]) Enclosure pressure limit: 500 Pa. Peak positive pressure: 325 Pa. Peak negative pressure: 742 Pa

Venting and Peak Pressure Analysis of Enclosure

Pressure Relief Vent (PRV) type: **no pressure relief vent (PRV)** Discharge time: **10** s Enclosure pressure limit: **500** Pa

Equations to use for peak pressure and required vent area: **FSSA** Minimum humidity, RH_{min}: **30** % Maximum humidity, RH_{max}: **60** %

Venting notes:

Leakage area for enclosure
Equivalent leakage area at 125 Pa with n = 0.7: **30** sq in

Dataset 1 not used.: no pressure relief vent (PRV), Enclosure leakage used for pressure relief (Show details) 0 sq in

Dataset 2 not used.: no pressure relief vent (PRV), Enclosure leakage used for pressure relief (Show details) 0 sq in

Positive Results
no pressure relief vent (PRV), Enclosure leakage used for pressure relief

Positive peak pressure	325 Pa
Leak to Volume ratio, LVR _{pos}	17.69 sq in/1000 cu ft
Leakage area of enclosure	30 sq in
Leakage area of vent only	0 sq in
enclosure used for positive pressure relief	30 sq in
Minimum leakage to relieve positive pressure	14 sq in
Additional vent area needed	0 sq in

Positive pressure result:
using equations from FSSA
PASSES - ELA for enclosure and vent of 30 sq in exceeds the minimum required ELA of 14 sq in and the peak pressure of 325 Pa is less than the enclosure pressure limit of 500 Pa.

Negative Results
no pressure relief vent (PRV), Enclosure leakage used for pressure relief

Negative peak pressure	742 Pa
Leak to Volume ratio, LVR _{neg}	17.69 sq in/1000 cu ft
Leakage area of enclosure	30 sq in
Leakage area of vent only	0 sq in
enclosure used for negative pressure relief	30 sq in
Minimum leakage to relieve negative pressure	48 sq in
Additional vent area needed	18 sq in

Negative pressure result:
using equations from FSSA
FAILS - ELA for enclosure and vent of 30 sq in is less than the minimum required ELA of 48 sq in. At least 18 sq in of venting must be added to remain below the enclosure peak pressure limit of 500 Pa.

[Generate Report \(docx file - MS Word\)](#)

In the “Venting and Peak Pressure Analysis” section, there are 2 data sets that may be used to describe the venting area available during hold time, as well as the “Leakage area for enclosure” which was measured (or entered directly) in the “Hold time analysis- Total Enclosure Leakage” section and which is displayed here again for convenience, with its value extrapolated to 125 Pa.

The enclosure must be configured to the same condition that it would be in during the venting period. This means that if there is some means of pressure relief other than enclosure leakage (via the PRV specified in the dropdown), it must be set to discharge mode. Once this is done, another door fan test is run and this new leakage area is used for peak pressure calculations.

In some cases, the venting available with the chosen PRV will be different for a positive peak pressure than a negative peak pressure, so a separate dataset is provided to enter venting information for each direction.

For more detail on vent area testing and peak pressure analysis, please consider the Retrotec Level 2 Enclosure Integrity Training.

4.1 Choose equations to calculate peak pressure and minimum leakage area required

The drop down on the right allows you to choose the set of equations that will be used to calculate the peak pressure that will develop during discharge, and the minimum leakage area that will be required to relieve that pressure.

If you choose NFPA12, FIA or VdS, please heed the following warnings:

Warning - Recommended equation not chosen**Warning - Recommended equation not chosen**

Warning for Inert Agents: VdS and FIA equations use peak mass flow rates to calculate the "required vent area", and these have been defaulted to rates consistent with experiments. Entering smaller rates may result in undersized vents.

Warning for Halocarbon Chemical Agents: VdS equations use peak mass flow rates to calculate the "required vent area" and assume only positive pressures occur during a discharge which is not consistent with experiments where negative peak pressures were often greater than the positive. FSSA or FIA equations are recommended.

Warning for gaseous Carbon Dioxide: VdS, FIA and NFPA12 equations use peak mass flow rates to calculate the "required vent area" and have been defaulted to rates consistent with experiments of other inert gases. Entering smaller rates may result in undersized vents.

If you choose to use equations relying on peak mass flow rate to calculate peak pressure and minimum leakage required to relieve the peak pressure, entering smaller peak flow rates to override default values may result in under-estimating minimum venting area required. Such an under-estimation would lead to over-pressurization if a smaller than necessary vent is installed.

4.2 Enter air leakage data used to determine leakage area of PRV

When "no pressure relief vent" is chosen in the "Pressure relief vent (PRV) type" drop down, venting area to relieve positive and negative peak pressure is calculated using "enclosure leaks only" which is displayed in the "Leakage area for enclosure" data box. The "Leakage area for enclosure" is the leakage taken from the Total Enclosure Leakage section extrapolated to a standard reference condition of 125 Pa which is representative of conditions where most of the peak pressure will be relieved. In this case, the venting datasets are not used.

Venting and Peak Pressure Analysis (hide details) using equations from FSSA (FM200) (NFPA) (HFC-227ea) Enclosure pressure limit: 500 Pa Peak positive pressure: 325 Pa Peak negative pressure: 742 Pa

Venting and Peak Pressure Analysis of Enclosure

Pressure Relief Vent (PRV) type: **no pressure relief vent (PRV)**

Discharge time: **10** s

Enclosure pressure limit: **500** Pa

Equations to use for peak pressure and required vent area: **FSSA**

Minimum humidity, RH_{min}: **30** %

Maximum humidity, RH_{max}: **60** %

Venting notes:

Leakage area for enclosure

Equivalent leakage area at 125 Pa with n = 0.7: **30** sq in

Dataset 1 not used.: no pressure relief vent (PRV), Enclosure leakage used for pressure relief (Show details) 0 sq in

Dataset 2 not used.: no pressure relief vent (PRV), Enclosure leakage used for pressure relief (Show details) 0 sq in

When any of the other PRV types are chosen, both venting datasets are used, the "Venting datasets express leakage area of:" drop down is used to indicate what was measured (or estimated) in the datasets.

When any of the PRV types that provide venting in both directions (for positive and negative pressure) are chosen, both venting datasets are used.

If the "Venting datasets express leakage area of:" drop down shows "enclosure and vent", datasets contain data which resulted from measuring or entering an estimate of the leakage area of the enclosure and vent combined. For measuring the positive venting dataset, the enclosure would have been set up in a condition where dampers were fixed in the position they would assume under +125 Pa, and for the negative venting dataset, the enclosure would have been set up in a condition where dampers were fixed in the position they would assume under -125 Pa.

(PRV) type: gravity vent (both)	Venting datasets express leakage area of: enclosure and vent
Discharge time: 10 s	For pressure relief use leakage area of: enclosure and vent
Enclosure pressure limit: 500 Pa	Minimum humidity, RH _{min} : 30 % Maximum humidity, RH _{max} : 60 %
Venting notes:	Leakage area for enclosure Equivalent leakage area at 125 Pa with n = 0.5: 30 sq in
Venting Dataset Positive Peak: Leakage area of enclosure and gravity vent (both) (Show details) 0 sq in	
Venting Dataset Negative Peak: Leakage area of enclosure and gravity vent (both) (Show details) 0 sq in	

If the “Venting datasets express leakage area of:” drop down shows “vent only”, datasets contain data which resulted from measuring or entering an estimate of the leakage area of the PRV itself. For measuring the positive venting dataset, the vents would have been fixed in the position they would assume under +125 Pa, and for the negative venting dataset, the vents would have been fixed in the position they would assume under -125 Pa.

(PRV) type: gravity vent (both)	Venting datasets express leakage area of: vent only
Discharge time: 10 s	For pressure relief use leakage area of: enclosure and vent
Enclosure pressure limit: 500 Pa	Minimum humidity, RH _{min} : 30 % Maximum humidity, RH _{max} : 60 %
Venting notes:	Leakage area for enclosure Equivalent leakage area at 125 Pa with n = 0.5: 30 sq in
Venting Dataset Positive Peak: Leakage area of gravity vent (both) (Show details) 0 sq in	
Venting Dataset Negative Peak: Leakage area of gravity vent (both) (Show details) 0 sq in	

When any of the PRV types that provide venting only in the positive direction are chosen, only the positive venting dataset is used, and leakage area for negative pressure relief is assumed to be the “Total Enclosure Leakage”.

(PRV) type: gravity vent (positive only)	Venting datasets express leakage area of: enclosure and vent
Discharge time: 10 s	For pressure relief use leakage area of: enclosure and vent
Enclosure pressure limit: 500 Pa	Minimum humidity, RH _{min} : 30 % Maximum humidity, RH _{max} : 60 %
Venting notes:	Leakage area for enclosure Equivalent leakage area at 125 Pa with n = 0.5: 30 sq in
Venting Dataset Positive Peak: Leakage area of enclosure and gravity vent (positive only) (Show details) 0 sq in	
Dataset 2 not used.: no negative-opening pressure relief vent specified, Enclosure leakage used for pressure relief (Show details) 0 sq in	

When any of the PRV types that provide venting only in the negative direction are chosen, only the negative venting dataset is used, and leakage area for positive pressure relief is assumed to be the “Total Enclosure Leakage”.

PRV type: gravity vent (negative only)	Venting datasets express leakage area of: enclosure and vent
Discharge time: 10 s	For pressure relief use leakage area of: enclosure and vent
Enclosure pressure limit: 500 Pa	Minimum humidity, RH _{min} : 30 % Maximum humidity, RH _{max} : 60 %
Venting notes:	Leakage area for enclosure Equivalent leakage area at 125 Pa with n = 0.5: 30 sq in
Dataset 1 not used.: no positive-opening pressure relief vent specified, Enclosure leakage used for pressure relief (Show details) 0 sq in	
Venting Dataset Negative Peak: Leakage area of enclosure and gravity vent (negative only) (Show details) 0 sq in	

When any of the PRV types that provide the same venting area in both the positive and negative directions are chosen, only the positive venting dataset is used.

PRV type: vent (same area both)	Venting datasets express leakage area of: enclosure and vent
Discharge time: 10 s	For pressure relief use leakage area of: enclosure and vent
Enclosure pressure limit: 500 Pa	Minimum humidity, RH _{min} : 30 % Maximum humidity, RH _{max} : 60 %
Venting notes:	Leakage area for enclosure Equivalent leakage area at 125 Pa with n = 0.5: 30 sq in
Venting Dataset Positive Peak: Leakage area of enclosure and vent (same area both) (Show details) 0 sq in	
Dataset 2 not used.: leakage area in this direction is the same as other dataset (Show details) 0 sq in	

4.3 Choose leakage area to use for pressure relief

Once the venting datasets are established, the user must indicate which leakage area to use to relieve peak pressure. Again, if “no pressure relief vent (PRV)” is chosen as the PRV type, then the Total Enclosure Leakage extrapolated to 125 Pa will be used for peak pressure relief. Otherwise, the user can choose to use the “vent only” or “enclosure and vent” values for relief of peak pressure.

For pressure relief use leakage area of:	vent only
Minimum humidity, RH _{min} : 30 % Maximum humidity, RH _{max} : 60 %	(select an option) vent only enclosure and vent

If the venting dataset is expressing the leakage of “vent only” and peak pressure is to be relieved using leakage of “vent only”, then the leakage area from the venting dataset is used directly as the leakage area for the peak pressure calculations.

Venting datasets express leakage area of:	vent only
For pressure relief use leakage area of:	vent only

If the venting dataset is expressing the leakage of “vent only” and peak pressure is to be relieved using leakage of the “enclosure and vent”, then the leakage area from the venting dataset is added to the “Leakage area for enclosure” to create the “enclosure and vent” leakage area for the peak pressure calculations.

Venting datasets express leakage area of:	vent only ▼
For pressure relief use leakage area of:	enclosure and vent ▼

If the venting dataset is expressing the leakage of “enclosure and vent” and peak pressure is to be relieved using leakage of the “vent only”, then the “Leakage area for enclosure” is subtracted from the leakage area from the venting dataset to create the “enclosure and vent” leakage area for the peak pressure calculations.

Venting datasets express leakage area of:	enclosure and vent ▼
For pressure relief use leakage area of:	vent only ▼

If the venting dataset is expressing the leakage of “enclosure and vent” and peak pressure is to be relieved using leakage of “enclosure and vent”, then the leakage area from the venting dataset is used directly as the leakage area for the peak pressure calculations.

Venting datasets express leakage area of:	enclosure and vent ▼
For pressure relief use leakage area of:	enclosure and vent ▼

4.4 Venting and Peak Pressure Analysis test results

Positive Results		Negative Results	
no pressure relief vent (PRV), Enclosure leakage used for pressure relief		no pressure relief vent (PRV), Enclosure leakage used for pressure relief	
Positive peak pressure	109 Pa	Negative peak pressure	150 Pa
Leak to Volume ratio, LVR _{pos}	24.75 sq in/1000 cu ft	Leak to Volume ratio, LVR _{neg}	24.75 sq in/1000 cu ft
Leakage area of enclosure	30 sq in	Leakage area of enclosure	30 sq in
Leakage area of vent only	0 sq in	Leakage area of vent only	0 sq in
enclosure used for positive pressure relief	30 sq in	enclosure used for negative pressure relief	30 sq in
Minimum leakage to relieve positive pressure	4 sq in	Minimum leakage to relieve negative pressure	8 sq in
Additional vent area needed	0 sq in	Additional vent area needed	0 sq in
Positive pressure result: using equations from FSSA PASSES - ELA for enclosure and vent of 30 sq in exceeds the minimum required ELA of 4 sq in and the peak pressure of 109 Pa is less than the enclosure pressure limit of 500 Pa.		Negative pressure result: using equations from FSSA PASSES - ELA for enclosure and vent of 30 sq in exceeds the minimum required ELA of 8 sq in and the peak pressure of 150 Pa is less than the enclosure pressure limit of 500 Pa.	

Separate results are calculated for positive peak pressure and for negative peak pressure. Calculations vary depending on the equation set chosen to use – FSSA, VdS, or FIA. The equation for this test is set in the drop down, and a default can be chosen from the Settings menu.

Negative results are only provided where appropriate: for Halocarbon agents if FSSA or FIA equations are chosen and if leak to volume curve data exists for the agent.

The summary details the predicted peak pressure, the required minimum leakage to keep the pressure under the specified enclosure pressure limit, and any additional vent area that will be required over what is being assumed to provide the leakage for peak pressure relief (vent only or enclosure and vent).

The summary includes the following for each

- **Peak pressure [Pa]**
The peak pressure that the enclosure is predicted to develop during the hold time, based on the leakage being used for positive pressure relief.
- **“Leak to Volume ratio” (LVR_{pos} , LVR_{neg}) [sq in/1000 cu ft or cm^2/m^3]**
Used in the FSSA (and FIA for halocarbon) equations, peak pressure development during hold time is a direct function of the Leak to Volume ratio. The Leak to Volume ratio indicates how much leakage there is for a given unit of volume.
- **“Leakage area of enclosure” [sq in or cm^2]**
The leakage area of the enclosure alone, with the result extrapolated to a pressure of 125 Pa.
- **“Leakage area of vent only” [sq in or cm^2]**
The leakage area of the PRV alone, with the result extrapolated to a pressure of 125 Pa.
- **“..... used for positive/negative pressure relief” [sq in or cm^2]**
Lists the leakage area the user has chosen to be used for pressure relief, calculated based on the values in the venting datasets and the Total Enclosure leakage. It is used for the purpose of calculating Peak Pressure during hold time of the fire suppression system. This number is calculated based on the selection in the “For pressure relief use leakage area of” dropdown menu (refer to section 4.3).
There can be a different leakage area used for the positive and negative direction since different agents have different pressure release characteristics. Generally, Halocarbon gases create a large negative Peak Pressure with smaller amount of positive Peak Pressure, whereas Inert gases usually create large Peak Pressure only in the positive direction.
- **“Minimum leakage to relieve positive/negative pressure” [sq in or cm^2]**
The smallest leakage area that will allow the peak pressure to stay under the specified enclosure pressure limit and maintain the structural integrity of the enclosure during hold time.
- **“Additional vent area needed” [sq in or cm^2]**
The Additional vent area needed is the calculated amount of leakage that needs to be provided, that does not currently exist based on the current settings. This additional leakage needs to be put in place so that Peak Pressure can be lowered to the point where the structural integrity of the enclosure is not compromised during agent hold time.


The additional vent area needed is calculated by subtracting the “... area used for pressure relief” value from the “Minimum leakage to relieve pressure” value.

4.5 Graphic showing acceptable range of leakage for enclosure

To see a graphic showing the allowable leakage range, click on the “Show ELA Graph” button below the Peak Pressure results. Leakage needs to be less than that required for hold time but more than that required to be under the allowed enclosure peak pressure limit.

The thick blue line shows the acceptable range for the enclosure leakage during discharge. The green triangle marks the leakage measured for the enclosure only. If the green triangle is to the left of the

range, then you need to add venting using a pressure relief vent. If the green triangle is to the right of the range, then you need to seal up the room.

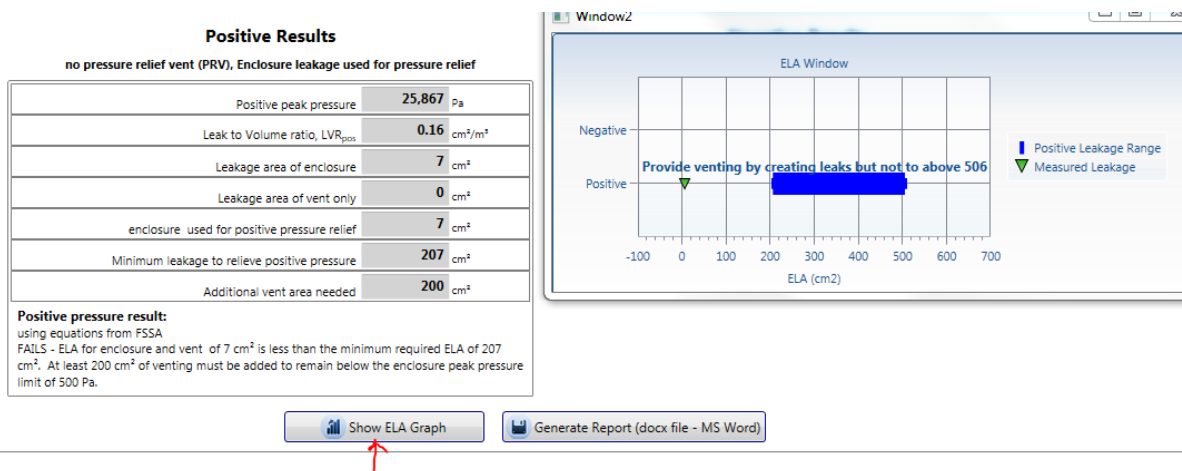

5 Use the Test results

5.1 Save results to a test file (.fxml)

When a new test file is created, it is automatically named based on the Standard used (ISO) and the date (yyyy-MM-dd) and time (HHmm) that the file was created, and it has a file extension of .fxml.

For example, "ISO 2014-02-28 1642.fxml" would be the name of the file created at 16:42 (4:42pm) on the 28th day of February in the year 2014.

When you click "File" → "Save", FanTestic Integrity stores test data into that file.

Test files are normally saved on your local C: drive under [MyDocuments]\Retrotec\Tests.

Test data can be automatically saved at periodic intervals by turning the Auto Save function on ("File" → "Auto save?"). Note that if you change the location of the test file to a remote drive, and then remove the remote drive with FanTestic Integrity running and AutoSave on, the software will not be able to save the file to the remote drive anymore, and may report an error.

5.2 Save results to a different file

FanTestic Integrity can store test data ("File" → "Save As"), which creates a new test file with the same name as the current test file but with the current date (yyyy-mm-dd) and time (HHMM) added at the end.

For example, using the original test file "ISO 2014-02-28 1642.fxml", if we do a "File" → "Save As" at 10:42am on the 3rd of March 2014, the new file will have the suggested file name: "ISO 2014-02-28 1642 [2014-03-03 1042].fxml".

The "SaveAs" function makes it convenient to save the original test and keep it intact, but have a second "Save As" copy in which to manipulate parameters without affecting the original test.

The "SaveAs" copy of the file may be changed without affecting the original test data, but the two files are visually linked via the filename.

5.3 Open a test file (.fxml)

To open a previous test that has already been completed and saved, there are several options:

- The main screen for FanTestic Integrity can display previously completed tests in the “Test History” pane on the left hand side (with a photo of the building, if it was included when the test file was created). If you have this option turned on (“Test History” → “AutoHide” not enabled), the list will remain open on the left at all times. Click the name of the test file you would like to open.
- Go to: “File” → “Open” and a pop-up Windows Explorer window will display all tests in the [MyDocuments]\Retrotec\Tests directory which have the file extension “.fxml”.
- Go to: “Test History” → “Show” – the left hand list of all saved tests will appear, the same as the one displayed on the opening screen for FanTestic.

5.4 Generate report documents (MS Word) from test data

FanTestic Integrity includes a built-in template for reports generated from test data, for each of the supported Standards.

To generate a report, select “File” → “Generate Report (docx – MS Word)”. There are also buttons that you can click in the user interface for your convenience: one below the hold time results, and one below the venting and peak pressure results.

The “Generate report” function will automatically create and open a Word document containing a report with the data from your test. These report files will be stored on your local Drive under [MyDocuments]\Retrotec\Reports.

Once the Word document is open, you can print it directly.

Because the report is created by copying a template document and replacing tags with the actual test data, reports are customizable in Microsoft Word with FanTestic Integrity Pro versions. ISO test reports are generated using the template called “ISO-en.docx” which will be located in the [MyDocuments]\Retrotec\Templates directory after you have created at least one report. If you have chosen the ISO2000 standard, the template used will be “ISO2000-en.docx”.

Users customize the report output by changing the text in the template file that is used to create the Word document, and as long as the tags remain somewhere in the template, test data will be output to the generated document.

If you want to create a language specific report, to match the language you use in the user interface, you can translate the template and call it “ISO-xx.docx” where xx is replaced with the country identifier. Some templates are already provided in translation, and if so, they will automatically be chosen for you if you have changed the language to use in FanTestic Integrity.

The report generation function is only available if you have a valid, non-expired license for FanTestic Integrity. If you do not have such a license, you will be limited to seeing results on the screen, and when you generate the .docx report file, it will only show a sample report. The sample report will not contain the results from the test you are viewing on the screen.

5.5 Printing

FanTestic Integrity will print the data as-is: only what is on the interface screen. Go to “File” → “Print”, and you can either generate a PDF document or print a paper copy using the printer functions in Windows.


The “Print” function essentially prints a screen shot of the FanTestic interface with each of the expander sections open, even if you cannot see all of the expander information on the screen at once.

Alternatively, and more effectively, you can generate a report from the data and print the report, see section 5.4


6 Troubleshooting

6.1 Use the most current version of FanTestic Integrity

To determine the latest version, go to: <http://www.retrotec.com/support/software-downloads> and click on the “Is your software up to date?” button beside the “Testing and Reporting Software” title:

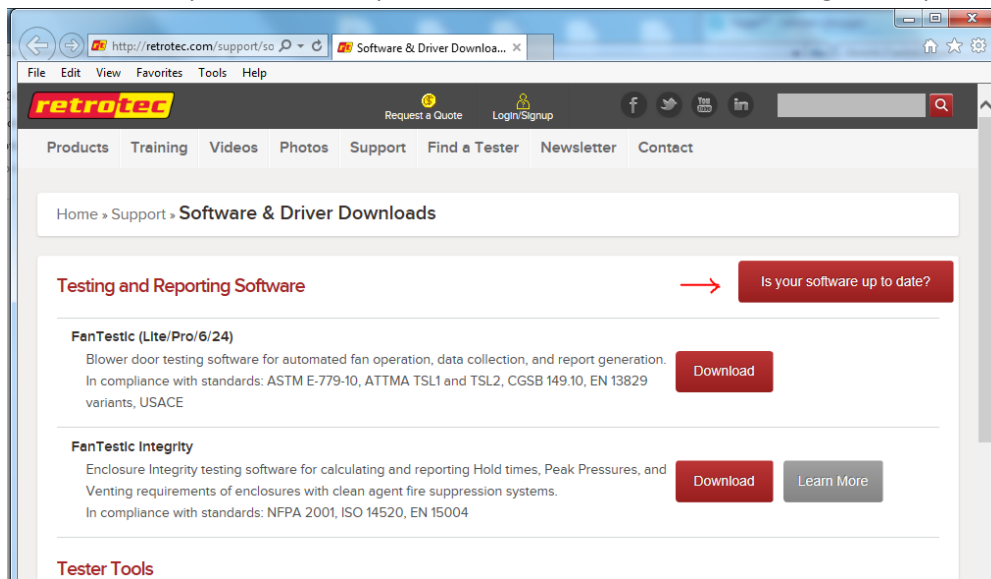

- In the window that opens, click on the down arrow beside “Any” and select FanTestic Integrity instead then click “Apply”.

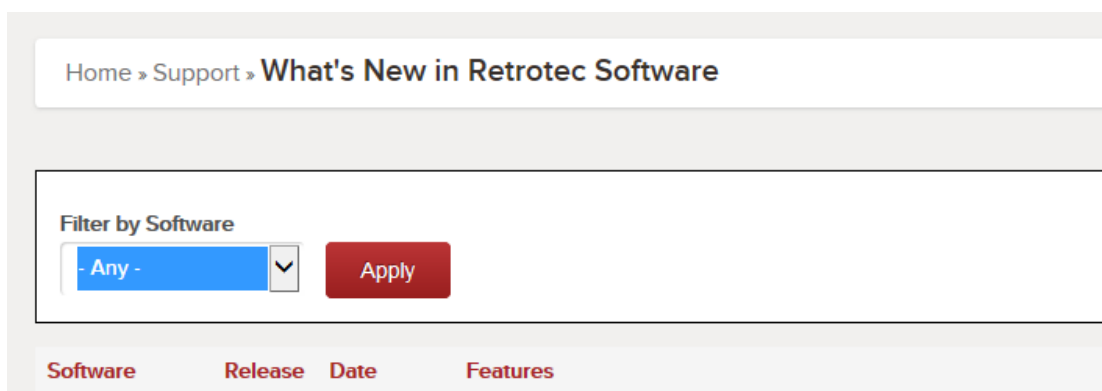


- A list of the versions of FanTestic Integrity will be shown, with the latest version at the top:

Home » Support » **What's New in Retrotec Software**


Filter by Software
 FanTestic Integrity ▾ Apply

Software	Release	Date	Features
FanTestic Integrity	5.7.7.24	2015-03-16	• changes to AS-ISO and ISO cal (with Nitrogen) • fixed manual room pressure an • graphs can resize onscreen • prevent infinite loop in BCLA F • prevent BCLA or Upper leaks b • fix UI mistakes in the BCLA, Lov • prevent report generation if no
FanTestic Integrity	5.7.5.20	2015-02-26	• has a problem with manual entu • has a problem with nitrogen ca

- Compare the online version number to the version number shown in the title bar when you open FanTestic Integrity. If they do not match, you need to update.

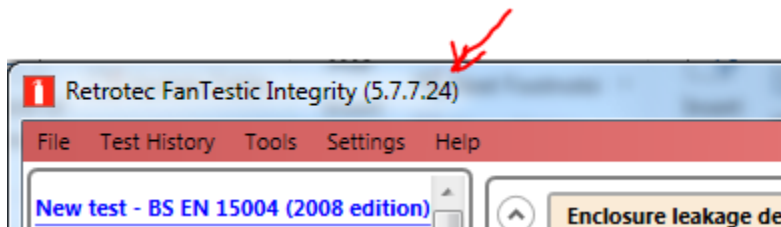


- To get the updated version, ensure your computer is connected to the internet, and click “File” → “Check for Updates”.
- If an update is available, you will be notified and prompted to restart FanTestic Integrity to perform the update. Starting FanTestic Integrity will download the update installer, and prompt you to start the update. Once the update is installed, FanTestic Integrity will start.

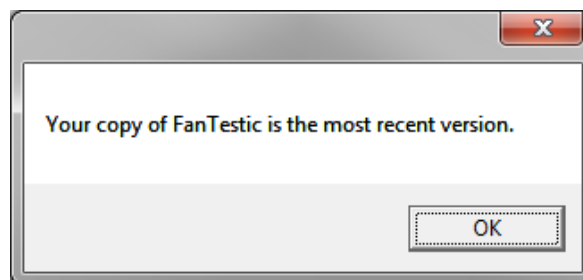

- Note that using the “File” → “Check for Updates” can declare that your FanTestic Integrity is up to date even when it is not in the following circumstances: your computer is not connected to the internet, you clicked “Skip update” when it was offered at any point, or you are using the “ADMIN” version of the software. This check for updates is a feature of the Click-Once installer technology used for installing the software, not FanTestic itself.

6.2 Install your Windows Updates

Make sure all the important and optional updates are installed for Microsoft Windows. This is particularly important for older versions such as Windows XP. FanTestic Integrity expects the computer to have installed the .NET 4 Framework, XML support, and a Windows Installer version 3.0 or greater.

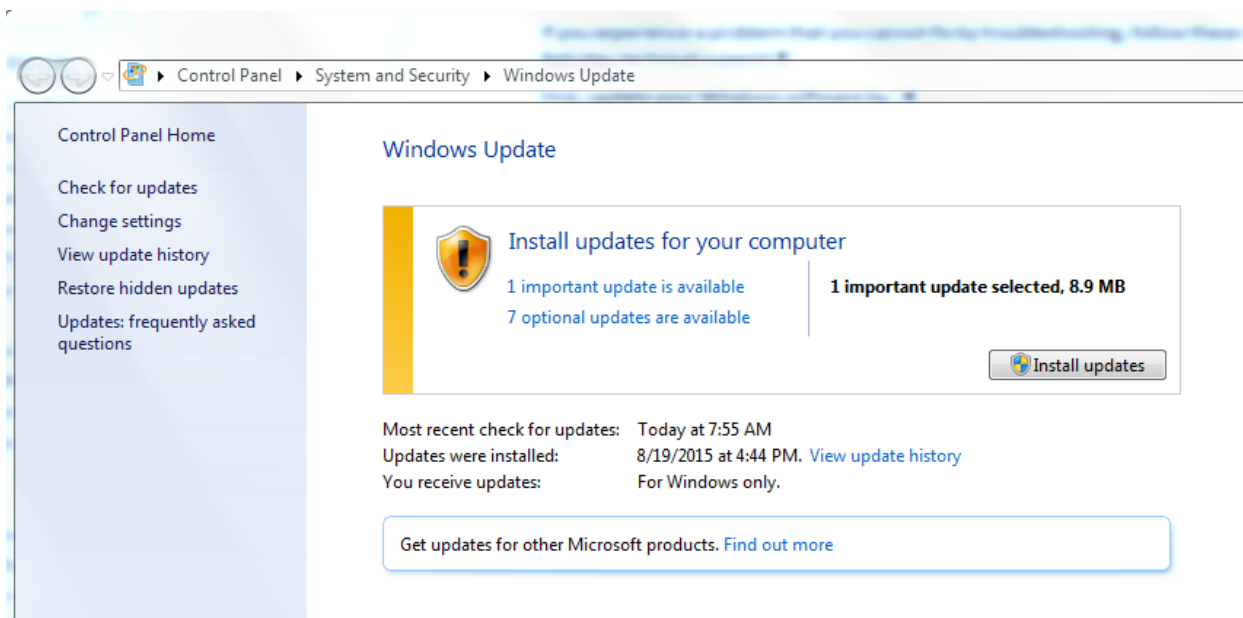

6.3 If using the “ADMIN” version, software will not update to latest

To determine if you are using an “ADMIN” version, check for the word “ADMIN” in the title bar. This will only be the case in very few circumstances, as the “ADMIN” version is a specific fix for problems some computers with limited privileges have in connecting to the DM-2 gauge for automatic control, which is not yet available in FanTestic Integrity.

If you see “ADMIN” in the title bar of your FanTestic Integrity while it is running, you should uninstall the version you have installed using the control panel, and DELETE ALL DESKTOP SHORTCUTS to FanTestic Integrity. Then you can re-install from the website link, as described in section 1.2.

You will not lose your license key or any settings if you do this uninstall and reinstall. If you actually need to use the ADMIN shortcut which is only needed if you have trouble connecting to your DM-2 gauges for the automatic testing and have determined that the error is “Error 5: Access Denied”, then you will need to carry out the procedure to generate the ADMIN shortcut.

- Note that using the “File” → “Check for Updates” can declare that your FanTestic Integrity is up to date even when it is not if you are using the “ADMIN” version of the software. This is a feature of the Click-Once installer technology used for installing the software.

6.4 Changing Range configurations

It becomes necessary to change Range Configurations during a test due to *fan pressure too low* (occurs when there is not enough flow through the fan) or the inability to reach a pressure target (occurs when fan speed is at 100% but you cannot reach the desired induced pressure).

NOTE: it is recommended that the tester induce pressures over the full range of pressures desired to be tested (e.g. 10 and 60 Pa) prior to performing the test, to ensure that one Range configuration can satisfy all pressures, and avoid changing Range configurations.

6.4.1 Why change the Range configuration

- a) If “TOO LOW” appears as the Flow on the gauge:
 - Increase Fan Pressure (restrict the flow) by installing a smaller Range configuration (e.g. “TOO LOW” appears when using Range C8, put in two more Range plugs to change the Range configuration to Range C6).
 - Make sure to record the new Range configuration in your notes/test form and in the software.
- b) If the fan is at 100% fan speed but the target induced pressure is not reached:
 - Decrease Fan Pressure (increase the flow) by installing a larger Range configuration (e.g. the fan is running at 100% speed using Range plate C8, remove the C Range plate, leaving the fan on Range configuration B).
 - Make sure to record the new Range configuration in your notes/test form, ad in the software

6.4.2 Enter Test Fan data for each Range configuration used


Transfer the data from your notes/test form into the “Induced pressure” and “Test Fan” data fields in FanTestic Integrity.

Add an additional “Test Fan” data set for each Range configuration change by clicking .

Enter the appropriate Fan Pressure data depending on which Range configuration was used. In the example below, the first three Induced pressures were achieved with Range plate C8; the next three Induced pressures required a smaller Range plate C6, and the Fan Pressure data are therefore on a different line, since each line corresponds to a particular Range configuration.

pressure [Pa]					
C8 ▾ [Pa]					
pressure [Pa]	-50.1	-42.3	-35.5	-27.5	-22.9
C8 ▾ [Pa]	55.1	47.4	38		
C6 ▾ [Pa]				47.3	40
				32.3	

 6.5 Cannot generate reports in FanTestic Integrity

- Make sure you have an unexpired demo or purchased license installed
- Make sure you are using the most recent version of Microsoft Word (2007 or 2010)
- If you are using an earlier version (2003 or earlier), download a free compatibility pack [here](#), which allows you to open/edit/save Word 2007 documents.
- Results are displayed in gray boxes. Remember to click  if any data is changed, in order to calculate and display the updated results.
- Always click calculate before generating a report, or recording values any other way.

7 Ask for Support

If you experience a problem that you cannot fix by troubleshooting, follow these steps to contact technical support at Retrotec.

7.1 Before you ask, update your software

First, update your FanTestic Integrity software to the latest version, see section 6.1.

Second, update your Windows software using Control Panel – System and Security - Windows Update, see section 6.2.

Third, if you are using the DM32 gauge, make sure you have updated the DM32 to the latest firmware version (DM-2 has no way for users to upgrade the firmware). See the DM32 Configurator software manual, section 5, for details on how to do this: <http://retrotec.com/manuals-guides/Manual-DM32%20Configurator.pdf>

7.2 What information to send

If you are still having problems after updating, follow the steps below to gather all the files which will describe the problem. We cannot solve your problem without the following information.

In your email, describe the problem and when it occurs, and attach the following:


- The standard are you using (click “Settings” → “Change Standard” to check)
- Log file from [My Documents]\Retrotec\Logs
- Test file you are using, file extension .fxml from [My Documents]\Retrotec\Tests
- Settings.xml file [My Documents]\Retrotec\AppData
- A screenshot of the software running or having the error
- the version of Microsoft Windows you are using

If you are having an error while generating a report in Microsoft Word, also provide the following

- the version of Microsoft Office you are using
- the report template file you are using (.docx) from [My Documents]\Retrotec\Templates
- the generated report (.docx) from [My Documents]\Retrotec\Reports

7.2.1 Find the Log File to Upload

Each test has an associated log file that is saved on your C: drive, in the Retrotec folder. These logs will help Retrotec to determine where the problem occurred. You can access the log files in your local drive, in [My Documents]\Retrotec\Logs. A new log file is created for each day, named Log_yyyy-MM-dd.txt. If you leave FanTestic Integrity running over the course of multiple days, the log file will have the date of the day when FanTestic Integrity was initially started.

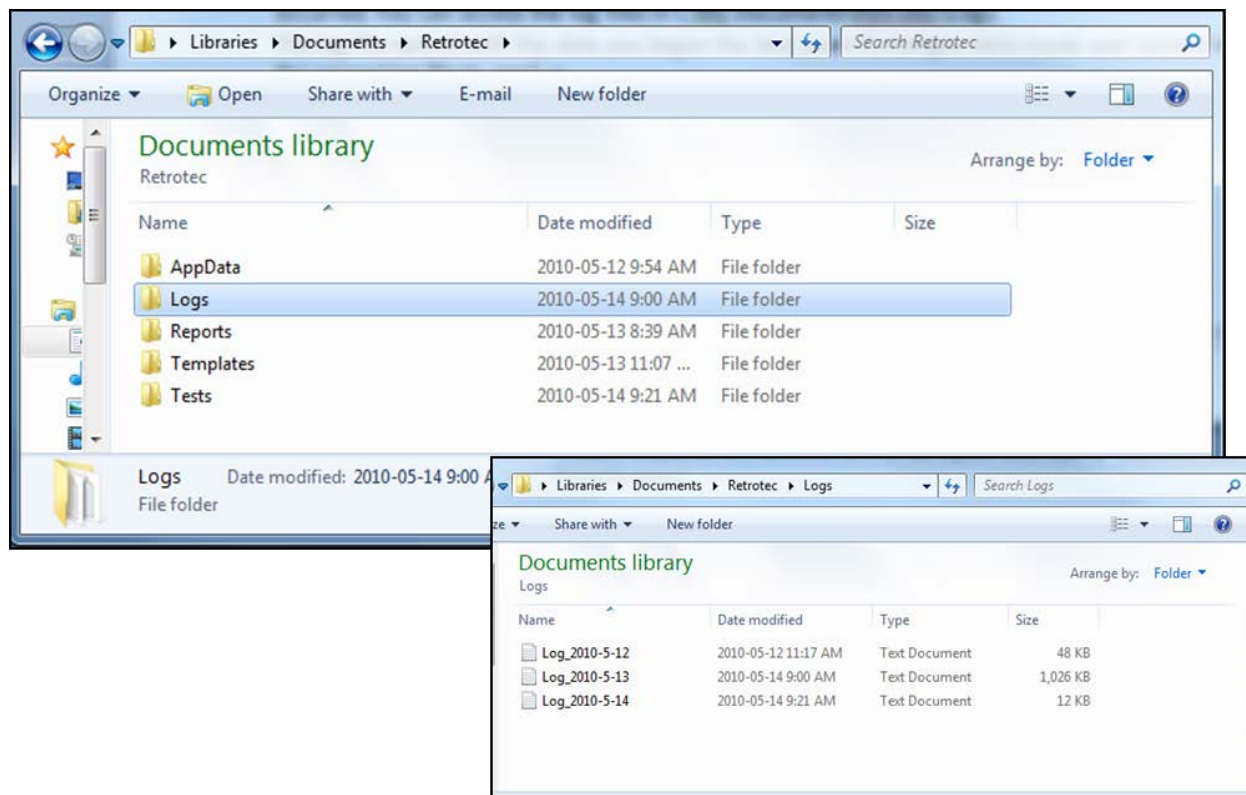

7.2.2 Find the Test File to Upload

The .fxml test files can be found in your local drive, in [My Documents]\Retrotec\Tests folder, and are saved by default with the date and time in the name. Send the .fxml file having the date you began the test.

7.2.3 Find the Settings File to Upload

The Settings.xml file is found in your [My Documents]\Retrotec\AppData folder, and contains information troubleshooting personnel can use to diagnose the problem.

7.2.4 Create a picture of the error to Upload

Screenshots are a way to show our Technical Support staff what your error looks like on your screen. This will help us, along with the background information (log, settings, and .fxml files), to determine the best approach to fix the problem.


Current versions of Microsoft Windows include the “Snipping Tool” which can be used to make a screen snip of the window or of an area of a window on the screen. The image will be on the Windows clipboard as if it has been “copied” so you can just “paste” it into an email.

In older versions you may need to create a document and then capture an image of the screen you are currently looking at. To capture an image of the screen, push the “Print Scrn” button on your keyboard. In order to attach this image as a file for us to view, you must paste it into a document. To do this, open a new Microsoft Word or Paint document, right click on your mouse and select “Paste” (or “Edit” → “Paste”). The captured image of your screen should appear in the document. You can now save this document and include it as an attachment when you email the files, or upload them, to Retrotec.

7.3 Where to send the information

- For Technical Support or to send suggestions, send an email to support@retrotec.com
- If you have encountered a bug which makes FanTestic crash, send an email to: bugs@retrotec.com

If you prefer, you can submit the information using a Software Support Request directly through the Retrotec website instead of sending the information via email. On www.retrotec.com/support click on the “Login/Signup” button to log in to the website, and then click on the “Request Software Technical Support” button:

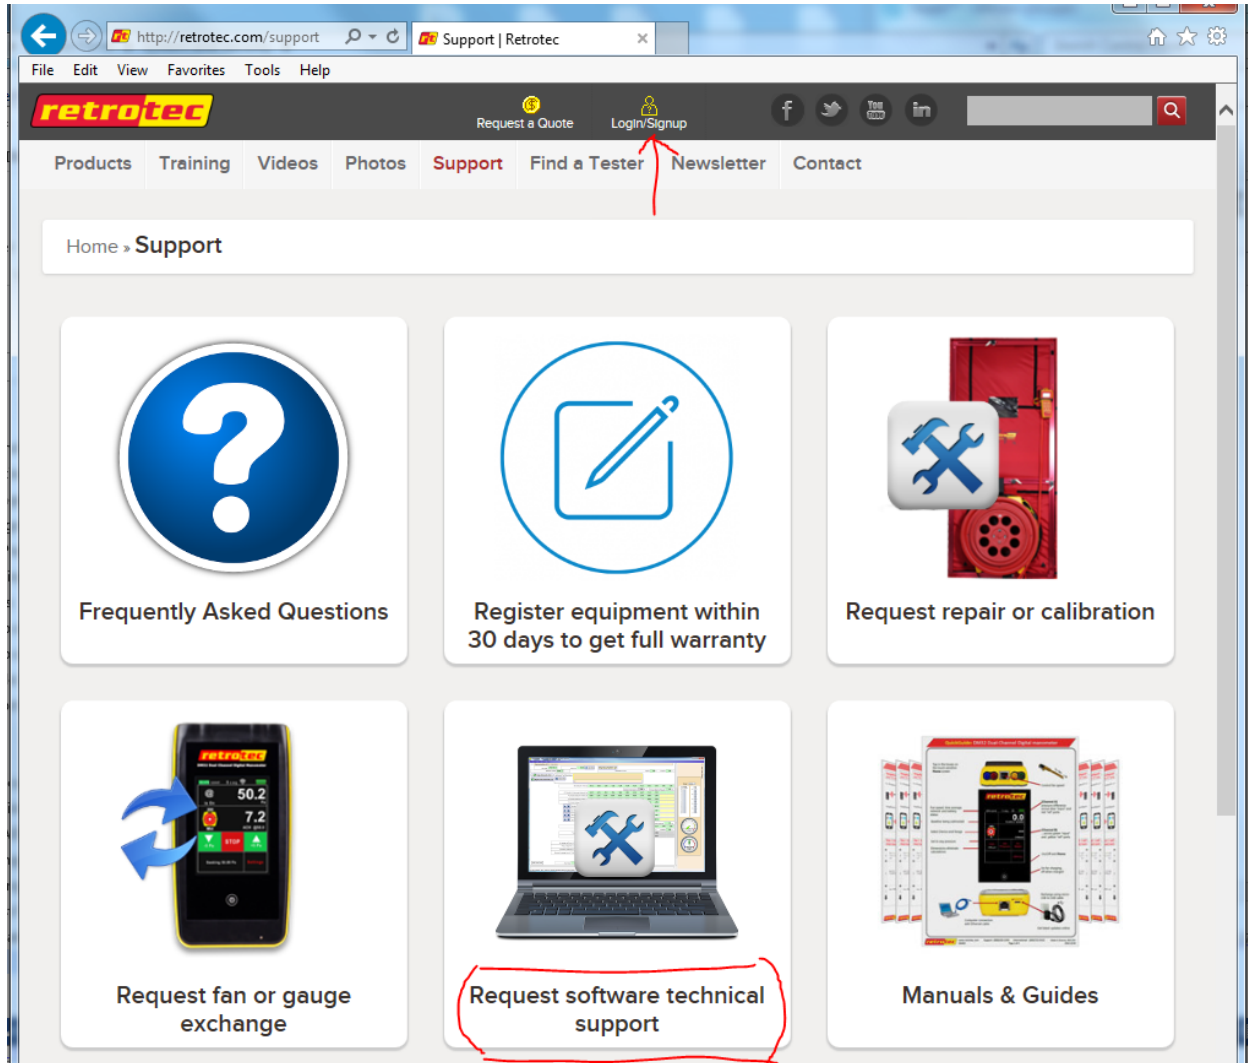

The request form will open and you can fill out the description of the problem and upload up to five files.

Create Software Support Request

To submit a software support request, fill in all the required information, provide a detailed description of the problem you are experiencing and the steps to reproduce this error. Attach up to five files for us to use in diagnosing your error. We will try to respond within 3 business days.

Company *

Your Company

Full Name *

your name

Email Address *

your email

Phone Number *

Software Support Requested for: *

☐ FanTestic
 ☒ FanTestic Integrity
 ☐ Duct Leakage Test Report Generator
 ☐ DM32 Configurator
 ☐ VirtualGauge
 ☐ GaugeRemote (Android)
 ☐ GaugeRemote (iOS)
 ☐ Data Logger

Software Version

For example: 5.7.3.15 Find this in the Title bar when you first start the program.

8 Get a License

E-mail license pricing inquiries to sales@retrotec.com . Once you receive your license key in the mail, ensure that you have the latest version of FanTestic Integrity installed on your computer (refer to section 6.1) and then refer to section 1.4 for detailed instructions on entering the license into the latest version of FanTestic Integrity.

You will be able to generate reports containing all the results when you have a valid, non-expired license.