



1 Secure the door

- ❑ Select a doorway, between 29" to 44" (74cm to 112cm) in width, and 53" to 97" (134cm to 247cm) in height.

For large frames, width must be 32" to 51" (81cm to 130cm) and height 59" to 109" (150cm to 277cm).

- ❑ The door must be held open securely during testing.



2 Unpack the frame

- ❑ Remove the frame pieces from the case.


A complete set includes one cloth panel, two long and two short frame parts, two crossbars, and a fan strap (attached to crossbar).

- ❑ Optional crossbar/frame extenders or cloth panels can be ordered if required.



3 Lay out the pieces


- ❑ Arrange the aluminum frame sections on the floor.
- ❑ Match the corners according to the numbers stamped on each section.
- ❑ Ensure all cam levers are "unlocked" (cam handles should be parallel to frame).

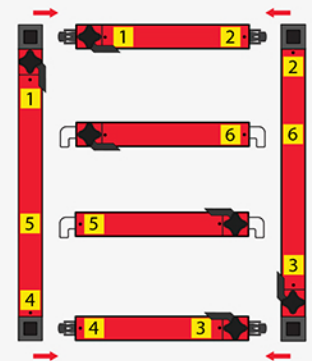

4 Assemble the corners

- ❑ Slide the corners together until they snap into position.
- ❑ Loosen all four black knobs to allow the frame sections to be resized.


Tip: If any of the pieces are loose, use the included Allen Key to tighten the screws.

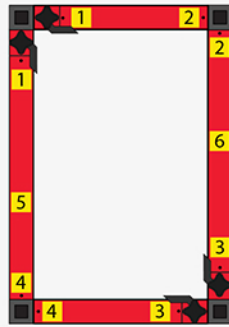

7 Replace the cloth panel


- ❑ Place the assembled cloth panel in the doorway.
- ❑ Loosen a black knob, extend the frame tight against the door frame and re-tighten them one at a time.

Tip: Step on bottom of frame while securing the cams, to ensure a tight fit.

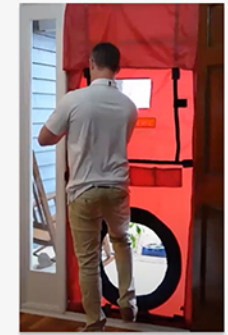

5 Size the frame to the doorway

- ❑ Position the frame in the doorway, and extend the frame until each side is in contact with the door frame.
- ❑ Tighten the black knobs but leave the cam levers in the "unlocked" position.
- ❑ Insert and extend the crossbars into slots at position '5' and '6'.


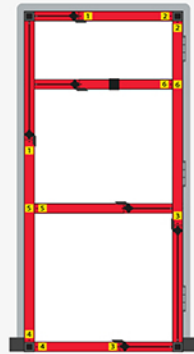


6 Attach the cloth panel

- ❑ Unfold the cloth panel and drape it over the frame.
- ❑ Attach the bottom Velcro tabs first, evenly along the bottom of the frame.

Tip: Setting the frame on its side, or flat on the floor, will make it easier to attach the cloth panel. Make sure the black knobs and cams are still accessible once the panel is attached.

- ❑ Fold the cloth panel over the top, right and left of the frame. Connect the vertical and horizontal Velcro strips to secure the cloth.
- ❑ Make sure that the fan hole is not stretched, or the fan will not have a proper seal when mounted in the panel cloth.

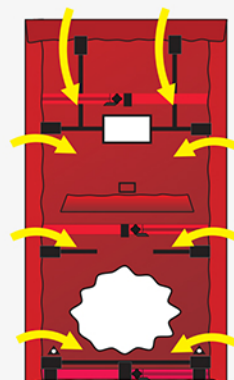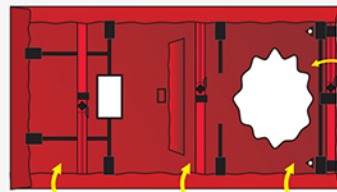

8 Engage cam levers

- ❑ Engage all cam levers to lock the frame into the doorway.
- Tug on the frame to ensure a tight fit.
- ❑ Refer to the Blower Door QuickGuide for installation of your fan + gauge.



9 Double or triple fan cloth (optional)

- ❑ Mount two or three fans with the optional two-fan / three-fan cloths plus a second crossbar.



Visit www.retrotec.com for the latest QuickGuides & Manuals